



www.ghibliwirbel.com

Professional Cleaning Machines Since 1968





815 - 909 PLUS


[EN] Use and Maintenance




GHEEDE
AACHENDEGG

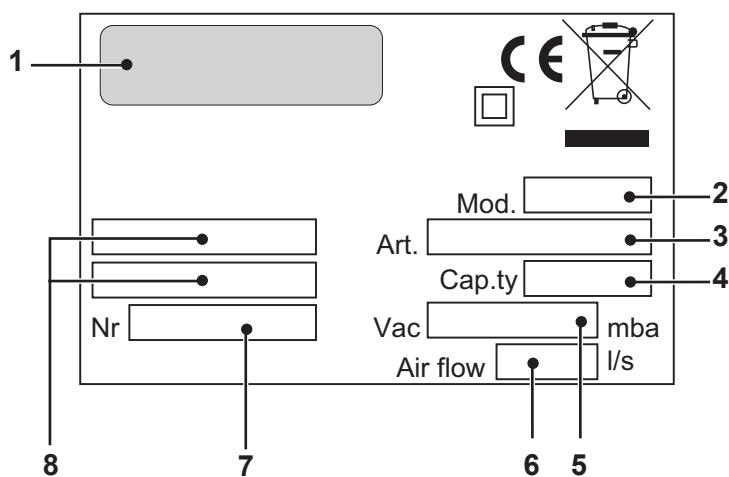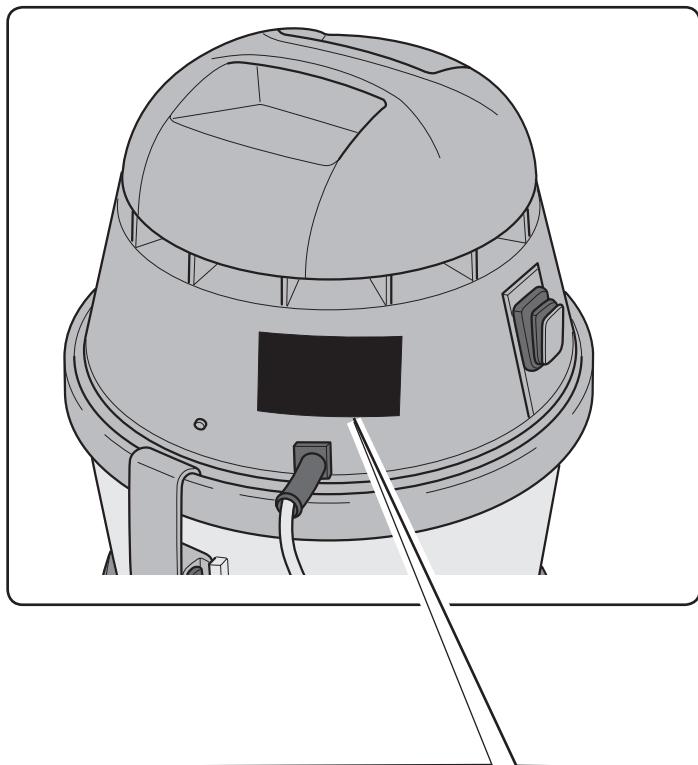

	1	2	3	4	5	6	7	8
IT	Produttore	Modello	Articolo	Capacità fusto	Capacità aspirazione	Portata d'aria	N° Matricola	Caratteristiche elettriche
EN	Manufacturer	Model	Article	Container capacity	Vacuum	Air flow	Serial N°	Electrical characteristics
FR	Producteur	Modèle	Article	Capacité de la cuve	Capacité d'aspiration	Débit d'air	N° Matricole	Caractéristiques électriques
DE	Hersteller	Modell	Artikel	Fassungsvermögen des Körpers	Aufsaugleistung	Luftdurchsatz	Matrikelnr.	Elektrische Eigenschaften
ES	Fabricante	Modelo	Artículo	Capacidad del bidón	Capacidad de aspiración	Caudal de aire	Nº Matricola	Características eléctricas
PT	Produtor	Modelo	Artigo	Capacidade do reservatório	Capacidade de aspiração	Caudal de ar	Número de série	Características elétricas
NL	Productent	Model	Artikel	Inhoud reservoir	Zugkapazität	Luchdebit	Seriennummer	Elektrische Eigenschaften
NO	Produsent	Modell	Artikkel	Beholderkapasitet	Sugekapasitet	Airflow	Matrikkelnr.	Elektriske egenskaper
DK	Fabrikant	Model	Artikel	Beholdervolumen	Sugeeffekt	Airflow	Matrikelnummer	Ei-spezifikationer
SV	Tillverkare	Modell	Artikel	Korgens kapacitet	Sugkapacitet	Airflow	Seriennummer	Elektriska egenskaper
PL	Producent	Model	Artystka	Pojemność zbiornika	Poddciśnienie (mbar)	Przepływ powietrza	Nr. Fabryczny	Właściwości elektryczne
CS	Výrobce	Model	Typ	Obsah nádoby	Saci výkon	Množství dopravovaného vzduchu	Výrobní č.	Elektrické vlastnosti
SK	Výrobcia	Model	Výrobok	Objem nádoby	Saci výkon	Prietok vzduchu	Výrobne č.	Elektrické vlastnosti
TR	Üretici	Model	Ürün	Güverte kapasitesi	Aspirasyon kapasitesi	Hava Alığı	Seri No	Elektriksel Özellikler
HU	Gyártó	Modell	Cikk	A szár teljesítménye	Színő teljesítmény	Levegőhozam	Törzskönyvi szám	Eléktromos sajátosságok
RO	Producător	Model	Articol	Capacitate rezervor	Capacitate aspirație	Volum aer	Nr. Matricol	Caracteristici electrice
EL	Κατασκευαστής	Μοντέλο	Προϊόν	Χωρητικότητα κάδου	Iκανότητα αντροφόρησης	Ροή αέρα	Αρ. Μητρώου	Ηλεκτρικά χαρακτηριστικά
RU	Изготовитель	Модель	Артикул	Емкость бака	Мощность всасывания	Расход воздуха	Заводской №	Электрические характеристики
HR	Proizvođač	Model	Proizvod	Zapremnina spremnika	Uzinski kapacitet	Protok zraka	Registracijski br.	Električna svojstva
SR	Производач	Model	Proizvod	Kapacitet postolja	Kapacitet usisa	Nositost vazduha	Br. Proizvoda	Električne karakteristike
BG	Производител	Модел	Артикул	Вместимост на резервьора	Капацитет на засклуване	Въздушен поток	Серийен номер	Електрически характеристики
ET	Tootja	Model	Artikkel	Paagi maht	Imemisvõimsus	Õhuvool	Seeriaanumber	Elektrilised omadused
FI	Valmistaja	Malili	Artikeli	Kapasiteetti tekijästä	Kapasiteetti posilo	Virtaus ilma	Sarjanumero	Sähköiset ominaisuudet
LV	Razādojās	Modelis	Raksts	Tvertnes tilums	Sūkšanas jauda	Gaisis plūsma	Sērijas numurs	Elektriskie raksturlielumuri
LT	Gaminėjas	Modelis	Strainis	Bako talpa	Øsiubimo galimybės	Eiles numeris	Eiles numeris	Elektrines charakteristikos
SL	Proizvajalec	Model	Člen	Prostornina rezervoarija	Sesalna zmogljivost	Prelok zraka	Serijska številka	Električne značnosti
AR	الصانع	النوع	النوع	سعة الخزان	قدرة الشفط	تقدير القدرة	الرقم التسلسلي	المواصفات الفنية

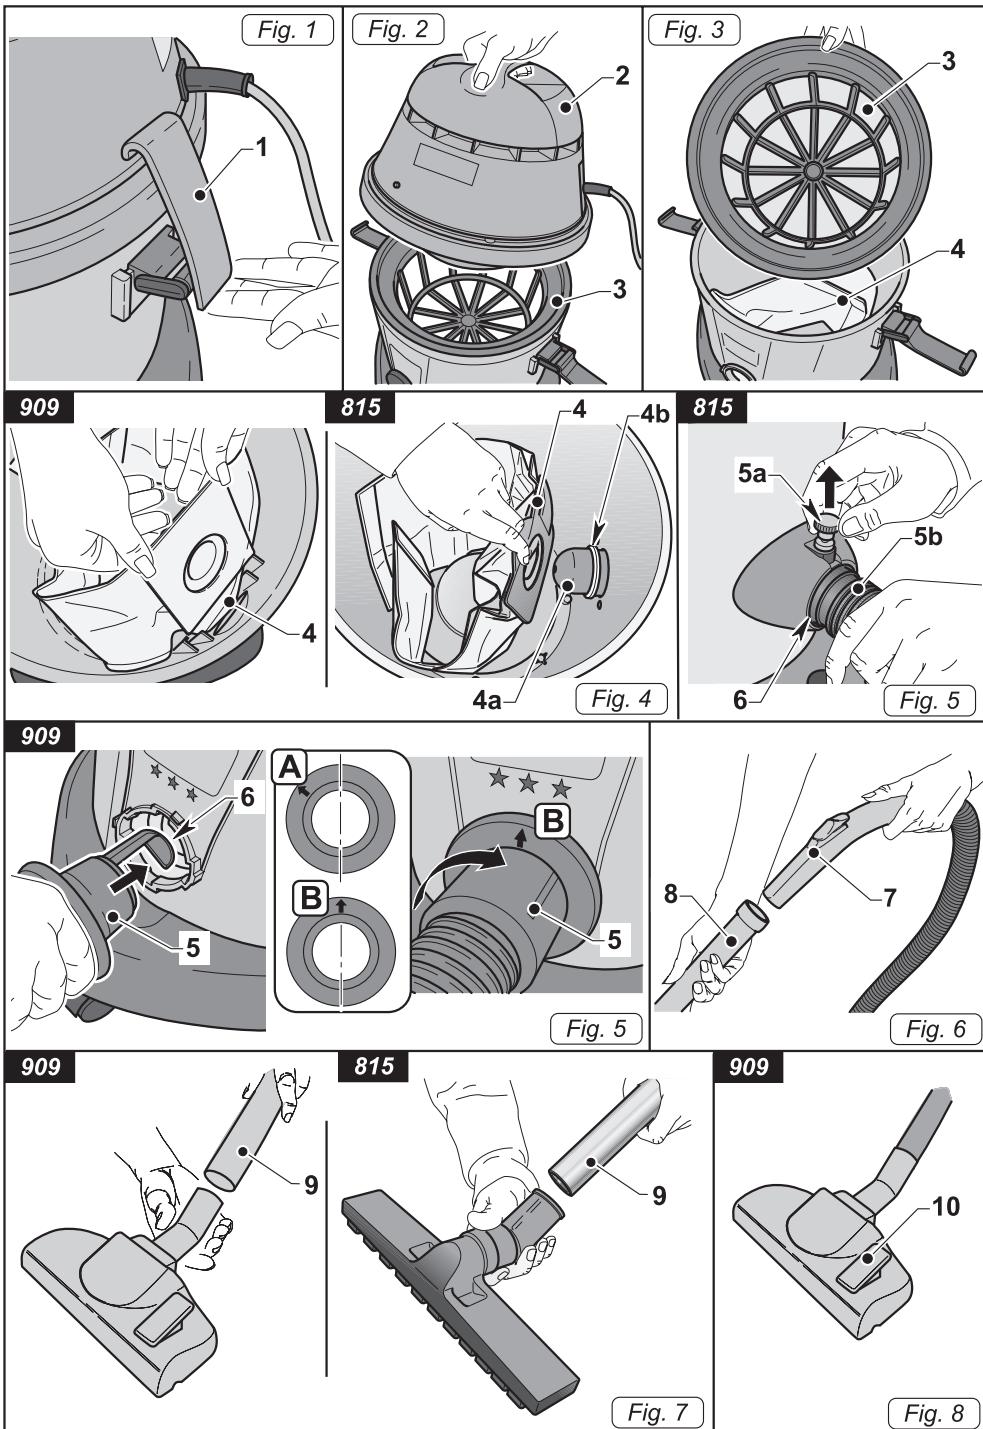

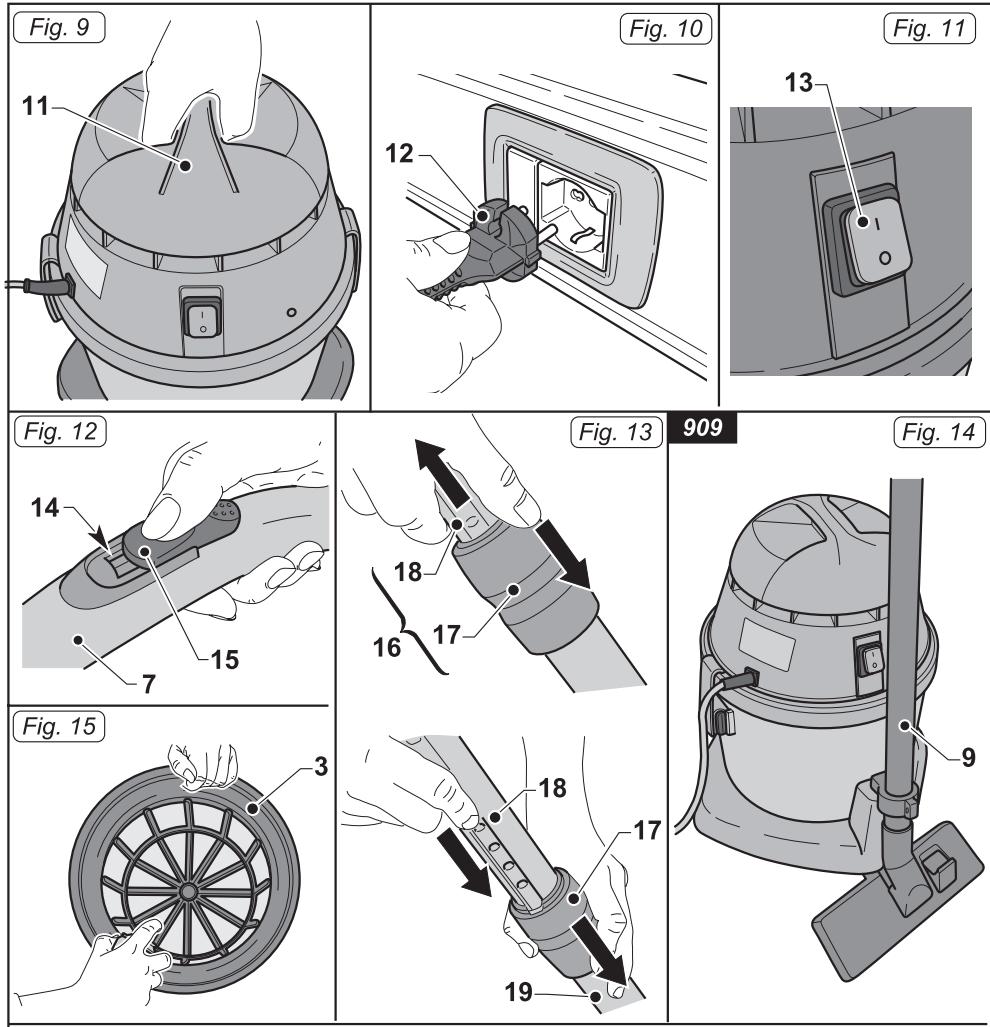

[EN]

English ENGLISH - 1
(Translation of original instructions)

TECHNICAL CHARACTERISTICS

Voltage	220-240 V
Motor power	800 W (909) 800 W (815)
Sound level	62 dB(A) (909) 65dB(A) (815)
Negative pressure	210 mbar
Paper bag capacity	12 l
Dimensions	320 x 320 x 520H mm (909) 340 x 340 x 570H mm (815)
Weight	6 kg (909) 8 kg (815 Plastic) 9 kg (815 Stainless steel)
Accessories.....	Ø 32 mm (909) Ø 36 mm (815)

TYPE OF USE

Use this appliance only as a dry vacuum cleaner to suck up dust, crumbs etc.
It has only been designed for this use.



DANGER:

The manufacturer can not be held responsible for any damage due to improper or incorrect use.

Any other use releases the manufacturer from liability for harm to persons and/or property and invalidates any warranty condition.

IMPROPER USE

Do not use the appliance to:

- Suck up liquids of any kind;
- Suck up flammable, explosive, corrosive and/or toxic substances.
- Suck up hot substances.

Do not use the appliance in areas at risk of explosion.

PREPARING THE APPLIANCE

Checking the filter systems

- Release the levers (1 Fig. 1) and remove the cover (2 Fig. 2) complete with the motor unit.
- Remove the polyester filter (3 Fig. 3).
- Check that the paper bag (4 Fig. 3) is assembled inside the appliance.
- If the paper bag (4 Fig.3) is not present, mount it as follows:

909P

Insert the square cardboard rigid part into the slot on the drum.

815

Fit the paper bag (4 Fig.4) into the nozzle (4a Fig. 4) until passing the collar (4b Fig.4).

- Replace the polyester filter (3 Fig. 3).
- Replace the cover and lock it using the levers (1 Fig. 1).

Assembling the piping

909P

Insert the sleeve with bayonet coupling (5 Fig. 5) into the hole (6 Fig. 5), moving the arrow on the sleeve (5 Fig. 5) to position "A", then turn the sleeve clockwise until it locks (arrow in position "B").

815

Lift the knob (5a Fig. 5) and insert the sleeve (5b Fig. 5) in the hole (6 Fig. 5) until it can't go any further and then release the knob.

- Attach the extension (7 Fig.6) to the ergonomic handle (8 Fig.6).
- Attach the required accessory (suction tool, dusting brush, crevice tool, multi-purpose brush etc.) to the rigid extensions (9 Fig.7).

Multi-purpose brush (if present)

The multi-purpose brush should be used as follows:

- To clean hard floors, parquet etc.: press the lever (10 Fig.8) back to extract the brush bristles.
- To vacuum on carpets, rugs etc.: press the lever (10 Fig.8) forwards to retract the brush bristles.

USING THE APPLIANCE



N.B.

The appliance can only be used if the paper bag is inserted correctly.

- The appliance is equipped with wheels and during use can be dragged along using the hose.
- To lift it up, insert your fingers into the handle (11 Fig.9) on the top of the cover

Switching on the appliance

- Insert the plug (12 Fig.10) into the socket.
- Set the switch (13 Fig.11) to "I". The appliance starts up: the light on the switch comes on.



N.B.

The suction force can be adjusted using the selector (15 Fig.12) located on the ergonomic handle (7 Fig.12).

Opening up the window (14 Fig.12) gives lower suction power.

Using the telescopic tube

(if present)

- The length of the telescopic tube (16 Fig. 13) can be adjusted as follows:
- To lengthen the tube, press down on the ring nut (17 Fig. 13) and simultaneously extract the top part (18 Fig. 13) of the tube. Once the required length has been obtained, release the ring nut (17 Fig. 13) the tube will lock into the nearest locking position;
- To shorten the telescopic tube, use one

hand to push the ring nut (17 Fig. 13) down and the other to reinsert the top tube (18 Fig. 13) into the lower sleeve (19 Fig. 13).

Switching off the appliance

- Set the switch (13 Fig.11) to "0" to switch off the appliance. The light on the switch goes off.
- Remove the plug (12 Fig.10) from the socket.

909P

Couple the tube (9 Fig.14) to the joint.

CLEANING AND MAINTENANCE



DANGER:

Before performing any maintenance, unplug the appliance from the mains.

Removing and replacing the paper dust bag

- Release the levers (1 Fig. 1) and remove the cover (2 Fig. 2) complete with the motor.
- Remove the polyester filter (3 Fig. 3).
- Remove the paper dust bag (4 Fig. 3) and replace it as described previously.
- Reassemble everything proceeding in reverse order compared to assembly.

Checking and cleaning the polyester filter

- Release the levers (1 Fig. 1) and remove the cover (2 Fig. 2) complete with the motor.
- Remove the polyester filter (3 Fig. 3).
- Clean the filter (3 Fig. 15) from the inside out with a blast of air. The filter (3 Fig. 15) can be washed in warm water but must only be replaced when completely dry. If it is too dirty, replace it.
- Reassemble everything proceeding in reverse order compared to assembly.

Cleaning the appliance body

- Clean the appliance body using a cloth dampened with water or mild detergent.



DANGER:

Do not wash the appliance using jets of water.

SPARE PARTS

909P

Pack of 5 paper filter bags Code MK-042

815

Pack of 5 paper filter bags Code 01-385

Polyester filter


Code 20-214

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch not pressed. Not plugged in. No current.	Press the switch. Insert the plug into the socket. Check the power line.
Suction is not satisfactory.	Paper bag full. Filter elements clogged. Accessories or tubes clogged.	Replace the dust bag. Clean the filter elements. Check and clean the hose and the suction tool.



Professional Cleaning Machines Since 1968

DEALER

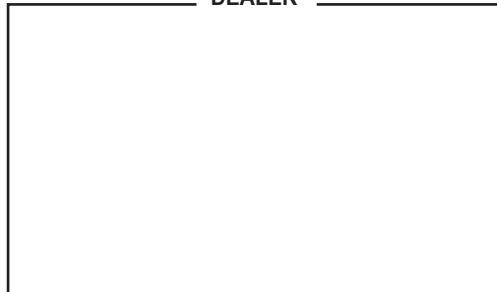

Cod. GHIBLI & WIRBEL - H ed. € / 2022

GHIBLI & WIRBEL S.p.A.

Registered office:
Via Enrico Fermi, 43 - 37136 Verona (VR) - Italy

Headquarters:
Via Circonvallazione, 5 - 27020 Dorno (PV) - Italy
P. +39.0382.848811 - F. +39.0382.84668 - M. info@ghibliwirbel.com

www.ghibliwirbel.com

100% MADE IN ITALY

