


ROYAL 15

E 38

M 38 BC Lithium

M 38 BC Lithium PLUS

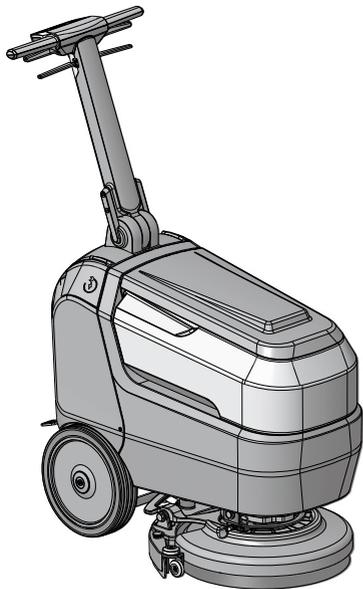


EN Use and Maintenance

CE

49.0357.00
ed. 07/2025



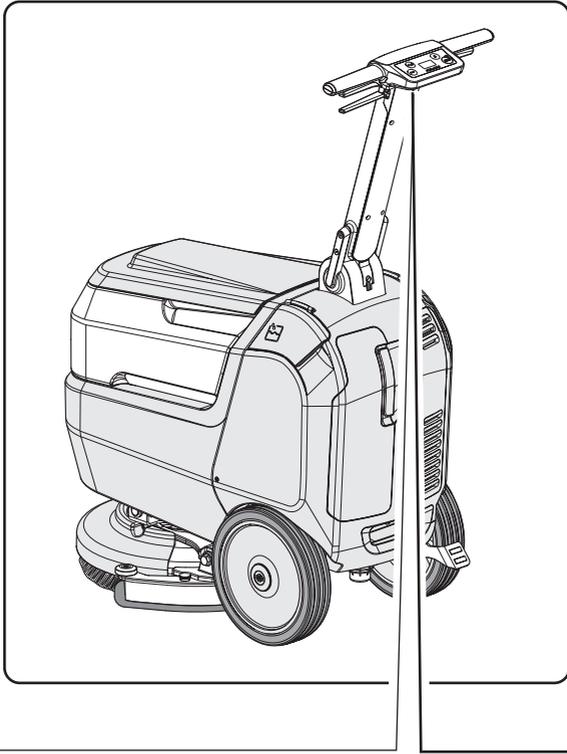

1

2

3

4

5

6

7

8

9

CE

EAC

IPX3

MADE IN ITALY

Scrubber Dryer

Mod:

Art:

Year:

GVW:kg

2%

s/n:

	1	2	3
IT	Produttore	Caratteristiche elettriche	N° Matricola
EN	Manufacturer	Electrical characteristics	Serial N°
FR	Producteur	Caractéristiques électriques	N° Matricule
DE	Hersteller	Elektrische Eigenschaften	Serien-Nr.
ES	Fabricante	Características eléctricas	N° Matricola
PT	Produtor	Características eléctricas	Número de série
NL	Producent	Elektrische eigenschappen	Serienummer
CS	Výrobce	Elektrické údaje	Výrobní č.
RU	Изготовитель	Электрические характеристики	Заводской №
PL	Producent	Specyfikacja elektryczna	Numer seryjny
AR	الصانع	المواصفات الكهربائية	الرقم التسلسلي

	4	5	6
IT	Grado di protezione	Peso in ordine di marcia	Anno di costruzione
EN	Degree of protection	Weight in running order	Year of manufacture
FR	Degré de protection	Poids en ordre de marche	Année de construction
DE	Schutzgrad	Gewicht bei Betrieb	Baujahr
ES	Grado de protección	Peso en orden de marcha	Año de fabricación
PT	Grau de protecção	Peso em ordem de marcha	Ano de construção
NL	Beschermingsgraad	Gewicht in rijklare toestand	Bouwjaar
CS	Úroveň ochrany	Hmotnost v provozním stavu	Rok výroby
RU	Βαθμός προστασίας	Βάρος στην λειτουργία	Έτος κατασκευής
PL	Stopień zabezpieczenia	Ciężar podczas eksploatacji	Rok produkcji
AR	درجة الحماية	الوزن في وضعية التشغيل	سنة الصنع

	7	8	9
IT	Codice articolo	Modello	Massima pendenza superabile
EN	Item code	Model	Maximum superable slope
FR	Référence de l'article	Modèle	Pente maximum surmontable
DE	Artikelnummer	Modell	Maximal befahrbare Steigung
ES	Código del artículo	Modelo	Máxima pendiente que se puede superar
PT	Código do artigo	Modelo	Máximo declive transponível
NL	Artikelcode	Model	Maximaal berijdbare hellingsgraad
CS	Kód položky	Model	Maximální překonatelný sklon
RU	Код изделия	Модель	Максимальный преодолимый наклон
PL	Kod artykułu	Model	Maksymalne superable stoku
AR	رمز المنتج	الطرز	أقصى درجة ميلان قابلة للتخطي

EN

English..... ENGLISH - 1
(Translation of original instructions)

*Dear Customer,
Thank you for choosing one of our cleaning products.*

The floor scrubber dryer that you have purchased has been designed to satisfy the user in terms of ease of use and reliability over time.

We are aware that in order for a good product to stay that way, over time, it requires continuous updates aimed at meeting the expectations of those who use it on a daily basis. For this reason, we hope that you will not only be a satisfied customer but also a partner who does not hesitate to give us your opinions and ideas originating from your personal day-to-day experience.

INDEX

INDEX	2
TECHNICAL DATA	3
1.1 - INTRODUCTION	4
2.1 - GETTING TO KNOW THE MACHINE (Fig. A)	4
3.1 - UNPACKING	5
3.1.a - Preliminary operations (Fig. B).....	5
3.1.b - Positioning of the handle (Fig. B).....	5
3.1.c - Unloading the machine from the wooden pallet (Fig. B).....	5
4.1 - ASSEMBLY COMPONENTS	5
4.1.a - Brush installation (Fig. C).....	5
4.1.b - Squeegee installation (Fig. D).....	5
4.1.c - Battery connection (for Lithium version).....	6
4.1.d - Electrical connection (for cord version) (Fig. E).....	6
5.1 - CHARGING THE BATTERY (Fig. F)	6
6.1 - MACHINE CONTROLS	7
6.1.a - Control panel (Fig. A).....	7
7.1 - DISPLAY	8
8.1 - MACHINE HANDLING (Fig. A)	9
9.1 - DETERGENT SOLUTION TANK	9
9.1.a - Tank filling (Fig. G).....	9
10.1 - OPERATION	10
10.1.a - Checks before use (Fig. A).....	10
10.1.b - Preparing the machine and choosing the cycle (Fig. A).....	10
10.1.c - Using the machine (Fig. A).....	10
10.1.d - End of use and switching off (Fig. A).....	11
10.1.e - Parking the machine (Fig. A).....	11
11.1 - DRAINING THE RECOVERY WATER (Fig. H)	11
12.1 - MAINTENANCE AND CLEANING	11
12.2 - OPERATIONS TO PERFORM DAILY	12
12.2.a - Emptying and cleaning the detergent solution tank (Fig. G).....	12
12.2.b - Cleaning the recovery water tank (Fig. H-I).....	12
12.2.c - Squeegee cleaning (Fig. J).....	12
12.3 - OPERATIONS TO PERFORM WEEKLY	12
12.3.a - Cleaning the solution filter (Fig. G).....	12
12.4 - OPERATIONS TO PERFORM WHEN NECESSARY	13
12.4.a - Brush cleaning / replacement (Fig. C).....	13
12.4.b - Squeegee rubber blades cleaning / replacement (Fig. K).....	13
12.4.c - Squeegee incidence set up (Fig. K).....	13
12.4.d - Lithium battery replacement (Fig. M).....	14
13.1 - PARAMETER SETTING (Fig. A)	15
13.1.a - OPERATOR parameters.....	15
14.1 - FUSE CHECK/REPLACEMENT	16
15.1 - ALARMS DURING THE FUNCTIONING	17
16.1 - TROUBLESHOOTING	18
17.1 - DEMOLITION OF THE MACHINE	19
18.1 - WIRING DIAGRAM	19
18.1.a - Wiring diagram (E version).....	20
18.1.b - Wiring diagram (BC version).....	20

TECHNICAL DATA

ROYAL 15	E - BC - BC PLUS
Driving type	Walk behind
Features	
Operation power (cord)	Power supply 100-240 V~ 50/60 Hz
Operation power (24V Lithium battery)	312 Wh - 547 Wh
Supply power	24V dc
Installed power	470 W
Running time	1 h (312 Wh) - 2 h (547 Wh)
Washing track width	385 mm
Suction width	477 mm
Productivity theoretical / practical	1540 m ² /h / 924 m ² /h
Hand-arm vibration system	1,0 m/s ²
Sound pressure (LpA)	64 dB(A)
Sound pressure in silent mode	61 dB(A)
Uncertainty KpA	0,75 dB(A)
IP code	IPX3
Operating temperature	5°C ÷ 40°C
Brush	
Diameter / pad / number	385 mm / 15" x 1
Motor power / number	280 W x 1
Brush speed	130 rpm
Specific pressure	52 g / cm ²
Traction	
Forward movement	Manual
Maximum slope of use during work	2 %
Suction	
Motor power	150 W
Depression (water column)	140 mbar / 1427 mmH ₂ O
Air flow	21 l / s
Tank	
Typology	Double tank
Recirculation	No
Solution capacity	15 l
Recovery capacity	17 l

ROYAL 15	E - BC - BC PLUS
Dimensions	
Machine dimensions (length x width x height)	772 x 477 x 731 / 1122 mm
Machine width - Brush deck	392 mm
Machine width - squeegee	477 mm
Battery compartment dim. (length x width x height)	154 x 233 x 134 mm
Weight	
Empty weight	44 kg - 45 kg - 45,4 kg
Weight with power supply / battery	46 kg - 47,2 kg - 48,6 kg
Gross vehicle weight (GVW)	63 kg - 65,6 kg - 65,6 kg

1.1 - INTRODUCTION



NOTE:

The numbers and the figure references shown in brackets refer to the components indicated in the annexed illustrative sheet.



DANGER:

Before using the machine carefully read the “Safety instructions for scrubber dryer machine” manual annexed to this one.

2.1 - GETTING TO KNOW THE MACHINE (Fig. A)

- (1) Driving handle.
- (2) Control console.
- (3) Squeegee operating pedal.
 - (3a) Pedal position for squeegee raised.
 - (3b) Pedal position for squeegee down.
- (4) Operator presence lever.
- (5) Lever for rotating handle positions.
- (6) Recovery water tank.
- (7) Recovery water tank cover.
- (8) Detergent solution tank.
- (9) Right door with socket and battery charger cable housing (BC version).
Right door with power plug (E version).
- (10) Left door for loading the detergent solution tank.
- (11) Rear door for access to the recovery water discharge hose and squeegee water suction hose.
- (12) Wheels.
- (13) Brush deck.
- (14) Brush.
- (15) Squeegee group.
- (16) Squeegee rubbers.
- (17) Squeegee wheels.
- (18) Squeegee bumper.
- (19) Detergent solution valve.
 - (19a) Open valve.
 - (19b) Closed valve.
- (20) Cleaning solution filter.
- (21) Detergent solution drain valve.
 - (21a) Closed valve.
 - (21b) Open valve.
- (22) Display.
- (23) Main button/brush rotation.
- (24) Brush release button.
- (25) Cleaning solution button.
- (26) Vacuum system button.
- (27) ECO button.

3.1 - UNPACKING

3.1.a - Preliminary operations (Fig. B)

Once the packaging has been removed as indicated in the instruction sheet on the packaging itself, check the integrity of the machine and all the components supplied.

If any obvious damage is found, contact your local dealer and carrier within 3 days of receipt.

- Remove the bag and boxes (28) containing the supplied accessories:
 - (14) 1 brush.
 - (15) Squeegee group.
- Take the documentation from the appropriate envelope.
- (29) Machine use and maintenance manual and Safety instructions for scrubber dryer machine.
- (30) Battery charger instruction manual (only for BC version).
- (31) Lithium battery instruction manual (only for BC version).
- Accessories supplied only for E version:
 - (32) Cord with snap hook.
 - (33) Tear-proof hook.
 - (34) 15 m extension cable.

3.1.b - Positioning of the handle (Fig. B)

- Unlock the driving handle (1) by pulling one of the levers (5) and lift it positioning it at the desired angle.
- Release the lever (5) to lock the handle in position.

3.1.c - Unloading the machine from the wooden pallet (Fig. B)

- Remove the wooden blocks (35) positioned in front of the wheels.
- Turn the ramp (36) in front of the wooden pallet.
- With the help of your hands on the driving handle (1), slightly raise the front of the

machine body, then carefully get off the pallet.

4.1 - ASSEMBLY COMPONENTS

4.1.a - Brush installation (Fig. C)

- Lift the machine in front by levering the handle grips (1) and remove the cardboard support (37).
- Place the brush (14) on the ground.
- Place the brush deck (13) on top of the brush (14) so that the driving flange (38) is centered with the brush engagement hole.
- Press the button (23)  to start the machine.
- Check the  icon on the display (22), otherwise press the button (23)  again.
- Press the levers (4) to start the rotation of the brush until you hear the "CLICK" of the brush attachment, then release the levers (4).
- Press the button (23)  for 3 sec. to turn off the machine.



WARNING:

Use only brushes provided by the manufacturer according to the model of the machine.

Using other types of brushes may compromise the safety of the machine.

4.1.b - Squeegee installation (Fig. D)

- Lower the squeegee support using the pedal (3) to position (3b).
- Manually rotate the brush deck (13) to one side of the machine.
- Mount the wiper (15) on the two slots of the support (37), then tighten the two handwheels (38).
- Reposition the brush deck unit in line with

the machine.

- Lift the squeegee assembly using the pedal (3) into position (3a).



WARNING:

Before lifting the squeegee unit, make sure that it is in line (A) with the running direction of the machine.

In case the pedal has locked the system (B), rotate the brush deck unit outwards, press the pedal back into position (3b Fig. A) and align the brush deck unit with the machine direction, then press the pedal into position (3a Fig. A).

4.1.c - Battery connection (for Lithium version)



NOTE:

The machine is delivered with the battery already installed, connected and with a percentage charge for initial use.

To recharge or replace it, see the specific chapter and paragraph.

4.1.d - Electrical connection (for cord version) (Fig. E)

- Mount the carabiner lanyard (32) on the handle (1) of the machine.
- Insert the extension cable (34) into the anti-tear hook (33), locking it as shown in the figure.
- Secure the snap hook (33) to the carabiner (32).
- Open the right door (9) and connect the plug (41) of the machine to the socket (42) of the extension cable (34).
- Connect the power plug of the extension cord to a socket with a minimum capacity of 10A.



WARNING:

Make sure that the mains system is equipped with an RCD (circuit breaker).

Unwind the power supply extension cable completely before operating the appliance.

Use the electric extension cable only if in perfect condition.

Never let the power cable run over sharp edges and do not tread on it.

5.1 - CHARGING THE BATTERY (Fig. F)



DANGER:

Charge the batteries in well-ventilated areas which comply with standards in force in the country of use.

For safety-related information, follow what is described in chapter 1.1 of this manual.



WARNING:

For information and warnings about the battery and the battery charger, follow what is described in the battery and battery charger manual enclosed with this document.

Check that the mains voltage is compatible with the operating voltage of the battery charger.



NOTE:

Charge the battery at each end of work or whenever the battery symbol on the display (22 Fig. A) displays 10% residual charge.

With the lithium battery it is possible to carry out partial recharges.



- Bring the machine to the vicinity of a mains power outlet.
- Open the right door (9), retrieve and unwind the charger cable (43).
- Connect the cable terminal (44) to the machine socket (45), then connect the plug (46) to the mains socket (the mains voltage and frequency must be equal to the corresponding values of the charger, shown on the license plate of the machine).



NOTE:

When the battery charger is connected to the electrical mains, all machine functions are automatically disabled.

- On the display (22 Fig. A), while the battery is charging, the battery icon appears with the segments in sequence.



Battery with 1 flashing notch: first charging phase.



Battery with 1 fixed notch and second flashing: second charging phase.



Battery with 2 fixed notch and third flashing: fully charged battery, with control in progress by the battery charger (can last up to 40 minutes).




Battery with 3 fixed notch: fully charged battery.

- Once the charging cycle has finished, disconnect the plug (46) of the battery charger cable (43) from the mains and the terminal (44) from the machine socket (45), rewind it by placing it in the appropriate seat (47), then close the right door (9).
- The machine can also be used while the battery charger is being checked.



NOTE:

If during the charging phase the message “Over Voltage” or “Battery Fault” appears on the display (22), the problem could be due to the battery.

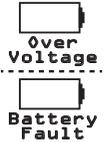

After the warning has been present for an hour, the display switches off in order to preserve the charge status reached by the battery itself.

6.1 - MACHINE CONTROLS

6.1.a - Control panel (Fig. A)

(22) Display

- See the specific chapter.



(23) Main button / brush rotation

- Press to turn on the machine; at startup, the display (22) indicates the working hours of the machine, then displays the battery charge status and the amount of cleaning solution set.
- Check the “” icon on the display, otherwise press the button (23) again.
- The start of the brush rotation is enabled by the levers pressed (4).
- To turn off the machine, press for 3 seconds the button (23) .



NOTE:

The machine switches off automatically after 5 minutes of inactivity, press the button (23) again to restart it.



(24) Brush release button

- By pressing the button (24) for 2 seconds, the brush release system is activated. On the display (22), the flashing icon , indicates the activation of the function.

(25) Detergent solution button

- When starting the machine with the main button, the cleaning solution prepares the last chosen setting.
- Press the button (25) to set the amount of cleaning solution dispensed during the work cycle, the amount is indicated by the icon on the display;

 - Minimum supply.

 - Average supply.

 - Maximum supply.

 - No supply.

- The delivery of the cleaning solution is enabled by the levers (4) pressed.

(26) Vacuum system button

- When the machine is started with the main button, the suction system is switched off.
- Press the button (26) to operate the normal operation (“”) icon on the display).
- The next time the button (26) is pressed, silent mode operation is activated (“”) icon on the display).
- The next time the button (26) is pressed, the suction system stops.



NOTE:

Switching from silent operation to power off (flashing “”) icon on display), the vacuum system runs for 5 seconds before stopping.

- The operation of the suction system is enabled by the levers (4) pressed.

(27) ECO SYSTEM button

- During work, pressing the button (27) on the display shows the “” icon, the parameters of cleaning solution and suction take the following values:

- Cleaning solution = minimum delivery.
- Suction = silent mode.

(4) Operator presence levers

- Press the levers (4) and hold them down to start the brush rotation and work functions.

(5) Tilt adjustment levers handle

- By pulling one of the levers (5) it is possible to vary the position of the driving handle (1); by releasing the levers, the handle is positioned and locked in the closest required position.



NOTE:

By positioning the driving handle (1) vertically, it is possible to effect a more thorough cleaning of corners by rotating the machine on itself.

7.1 - DISPLAY

With the machine on, the following icons shown on the display (22):



Hour meter

The number indicate the work time of the machine.



Battery (BC version only)

Indicates the battery charge status:

100% 70% 50% 30% 10% 0%



- With 10% battery, the brush function is disabled. The suction system remains in operation to be able to collect water residues on the floor.
- With 0% the machine is completely deactivated.

 **Brush**

It shown on the display indicating the brush function.

Press the button (23)  to deactivate (icon absent) or reactivate the brush function.

 **Detergent solution**

Indicates the amount of detergent solution dispensed during the work cycle.

Press the button (25)  to change the setting.

 **Vacuuming**

It shown on the display when the button (26)

 is pressed indicating the vacuum function in standard mode.

 **Silent mode vacuuming**

It shown on the display when the button (26)

 is pressed, indicating the vacuum function in low-speed mode.

ECO
 **ECO mode**

It shown on the display when the button (27)

 is pressed.

 **Brush release**

It flashing shown on the display after pressing for 2 seconds the button (24) .

8.1 - MACHINE HANDLING (Fig. A)

- With the help of the hands on the driving handle (1), slightly lift the front of machine body, then drive the machine up to the affected area.

9.1 - DETERGENT SOLUTION TANK

9.1.a - Tank filling (Fig. G)

**WARNING:**

Only add clean mains water to the tank at a temperature no greater than 50°C.

- Open the left door (10).
- Remove the extractable hose (48) and connect it to a water outlet.
- Open the tap and fill the detergent solution tank (8).

**WARNING:**

The blue Led (49), when turned on, warns that the solution tank is full. Close the water tap.

- Add the liquid detergent in the concentration and in the method indicated on the label by the detergent manufacturer.

**NOTE:**

Use non-foamy detergents only. For the quantities, follow the instructions provided by the detergent manufacturer according to the type of dirt.

**DANGER:**

If the detergent comes in contact with the eyes and/or skin or if swallowed, refer to the use and safety information booklet provided by the manufacturer of the detergent.

- At the end of filling the tank, reposition the extractable tube (48) in its seat and close the left door (10).

10.1 - OPERATION

10.1.a - Checks before use (Fig. A)

Check that the cleaning solution tap (19) is correctly in the open position (19a).

- Check the state of charge of the batteries as indicated in the "Display" paragraph.

10.1.b - Preparing the machine and choosing the cycle (Fig. A)

- Press the button (23)  to turn on the machine.
- Lower the squeegee unit (15) by acting on the pedal (3), releasing it from its coupling (3b).
- The machine has the possibility to perform 5 work cycles:

Washing, brushing, drying cycle:

- Press the button (26)  to start the suction system.
- Press the button (25)  to arrange the delivery of the cleaning solution, then press the levers (4) to start the cycle.

Washing, brushing, drying cycle, ECO SYSTEM mode:

- Press the button (27)  to start the suction system and the delivery of the cleaning solution in low consumption mode, then press the levers (4) to start the cycle.

Drying only cycle:

- Repeatedly press the button (25)  to deactivate the cleaning solution delivery system ("💧" icon on the display).
- Press the button (26)  to start the suction system, then press the levers (4) to start the cycle.

Washing, brushing cycle:

- Lift the squeegee assembly using the pedal (3) into position (3a).

- Press the button (26)  until the suction system stops.

- Press the button (25)  to arrange the delivery of the cleaning solution, then press the levers (4) to start the cycle.

Brushing only cycle:

- With the cleaning solution and the suction system deactivated, press the levers (4) to carry out the brushing cycle only; releasing the levers (4) the brush stops.

10.1.c - Using the machine (Fig. A)

- After starting the machine and choosing the type of cycle, start the cleaning operations by pressing the levers (4) and keeping them pressed to start the rotation of the brush and the dispensing of the detergent solution; then push the machine using the driving handle (1).



NOTE:

Releasing the levers (4) stops the rotation of the brush and the dispensing of water.

To avoid damaging the floor, do not use the machine in a fixed position with brush rotation activated

The correct way of cleaning and drying the floor is to move the machine forwards. Moving the machine backwards damages the blades as well as not allowing correct aspiration of the water present on the floor.

- If necessary, adjust the amount of delivery of the cleaning solution using the button (25) .
- (Only for BC version) Check the state of charge of the batteries as indicated in the "Display" paragraph.

10.1.d - End of use and switching off (Fig. A)

- At the end of the cleaning operations, before turning off the machine, stop the delivery of the detergent solution by pressing the button (25)  (“.



WARNING:

Always lift up the squeegee at the end of cleaning in order to prevent the deformation of the rubber blades.

10.1.e - Parking the machine (Fig. A)

At the end of work, before leaving the machine:

- Make sure the squeegee unit (14) is raised.
- Remove the brush as indicated in the “Brush cleaning / replacement” paragraph.
- Empty the recovery water tank (6) as indicated in the specific paragraph.
- Perform the planned maintenance after using the machine (see chapter Maintenance and cleaning).
- Lift the machine in front by levering the handle (1) and move the machine to a dry and clean place prepared for storage.
- Make sure that the machine cannot move independently.

If you plan not to use the machine for more than 15 days, you should carry out the following operations:

- Close the detergent solution tap (19b).
- Disconnect the battery connector (67 Fig. M).



NOTE:

When parking the machine, it is recommended to place a spacer under the brush hub (38 Fig. C) to keep the brush deck raised

11.1 - DRAINING THE RECOVERY WATER (Fig. H)

At the end of the washing cycle or when the recovery water tank (6) is full, it is necessary to empty the tank by proceeding as follows:



NOTE:

To dispose of the recovery water, comply with the standards in force in the country in which the machine is used.

- Position yourself with the machine near an exhaust drain.
- Open the rear door (11).
- Detach the drain hose (50) from the support.
- Remove the cap (51) from the tube (50) and completely drain the water contained in the tank.
- Replace the cap (51) and reposition the drain hose (50) on the relative support.
- Close the rear door (11).

12.1 - MAINTENANCE AND CLEANING



WARNING:

For information and warnings related to maintenance and cleaning operations please follow what is indicated in the “Safety instructions for scrubber dryer machine” annexed to this one.

12.2 - OPERATIONS TO PERFORM DAILY

12.2.a - Emptying and cleaning the detergent solution tank (Fig. G)



WARNING:

At the end of the washing operations it is mandatory to drain and clean the detergent solution tank (8) to avoid deposits or encrustations.

After draining the recovery water tank (6), drain the cleaning detergent solution tank (8) as follows:

- Position yourself with the rear side of the machine on an exhaust drain.
- Open the cleaning solution drain tap (21b) and let the contained liquid completely drain.
- Wash the inside of the tank leaving the drain tap open and introducing clean water from the extractable tube (48) of the tank.
- At the end of the cleaning, close the drain tap (21a), reposition the extractable tube (48) in its seat and close the left door (10).

12.2.b - Cleaning the recovery water tank (Fig. H-I)



WARNING:

At the end of the washing operations, it is compulsory to clean the recovery water tank to prevent deposits or scaling and the proliferation of bacteria, odours or mould.

- Drain the recovery water as shown in the relative paragraph, positioning the machine over a drain outlet.

- Remove the cover (7) and clean the inside of the lid, the float (52) and the vacuum safety mesh filter (53) with running water.
- Leaving the hose (50) lowered and the cap off, add water through the upper opening (54), cleaning the inside of the tank until clean water comes out of the drain hose.
- Replace all the components in reverse order.

12.2.c - Squeegee cleaning (Fig. J)

To clean the squeegee (15) correctly, remove it as follows:

- Lower the squeegee assembly using the pedal (3 Fig A) to position (3b).
- Manually rotate the brush deck (13) to one side of the machine.
- Loosen the knobs (40) and remove the squeegee (15).
- Reverse and wash the squeegee and especially the rubber (55) and (56) and the inner frame of the suction fitting (27).



NOTE:

If, during washing, it is clear that the rubber blades (55) and (56) are damaged or worn, it is necessary to replace them or turn them over.

- Replace all the components in reverse order.

12.3 - OPERATIONS TO PERFORM WEEKLY

12.3.a - Cleaning the solution filter (Fig. G)

- Close the detergent solution tap (19b).
- Unscrew the transparent cover (58) of the filter and remove the filter (59).
- Clean the filter (59) with running water, replace it if it is clogged.
- Replace all the components in reverse order.
- Open the detergent solution tap (19a).

12.4 - OPERATIONS TO PERFORM WHEN NECESSARY

12.4.a - Brush cleaning / replacement (Fig. C)

It becomes necessary to replace the brush when it is worn with bristles shorter than 2 cm or it must be replaced according to the type of floor to wash; to replace it, proceed as follows:

- Make sure the squeegee unit (14) is raised.
- Press the button (23)  to start the machine.
- Lift the machine from the front by leveraging the handle grips (1 Fig. A).
- With the brush holder head (13) raised, press for 2 seconds the brush release button (24)  to activate the release function, then wait for the brush to fall to the floor.
- If this does not happen, repeat the operation.
- Clean and wash the brush with water and detergent or replace the brush.
- Place the brush deck (13) on top of the brush (14) so that the driving flange (38) is centered with the brush engagement hole.
- With the machine turned on and the presence of the  icon on the display (22), press the levers (4) to start brush rotation until you hear the "CLICK" of the brush coupling, then release the levers (4).
- Press the button (23)  for 3 sec. to turn off the machine.

12.4.b - Squeegee rubber blades cleaning / replacement (Fig. K)

When it becomes clear that drying the floor is difficult or traces of water remain on the floor, it is necessary to check the wear on the squeegee rubber blades:

- Remove the squeegee assembly (15) as indicated in the "squeegee cleaning" paragraph.
- Fully untighten the lug nuts (40) and knobs (60) completely, then remove the rubber squeegee group (61) from the closing frame (62).
- Remove the inner rubber (55) and the outer rubber (56) disengaging them from the squeegee grooves (63).
- Clean and wash the rubber blades with water and detergent.



NOTE:

When the rubber blades (55) or (56) are worn on one side, on one occasion they may be turned over.

- Replace or turn over the rubber blades (55) or (56) without inverting them.
- Replace all the components in reverse order.



NOTE:

Two types of rubber are available:
Para rubber for all types of flooring and polyurethane rubber for workshop floors with oily residues.

12.4.c - Squeegee incidence set up (Fig. K)

- Lower the wiper assembly (15 Fig A) using the pedal into position (3b Fig. A).
- Start the suction system as indicated in the paragraph "Machine preparation and cycle choice" and proceed for a few metres, then switch off and stop the machine.
- Check the incidence of the tires on the floor.
 - A = too squashed
 - B = too raised
 - C = correct position.

- To adjust, loosen the nut (64) of the rear wheel (65) and move the wheel vertically along the slot; lifting the wheel increases the incidence, vice versa it decreases.

12.4.d - Lithium battery replacement (Fig. M)



WARNING:

The battery must be installed by qualified personnel only.

The electrical components of the machine can be seriously damaged if the battery is not installed and connected correctly.

Handle the battery with great care.

- Make sure the machine is switched off.
- Check that the recovery water tank is empty, otherwise discharge the liquid as indicated in the specific paragraph.
- Close the cleaning solution tap (19b).
- Open the rear door (11).
- Disconnect the suction pipe (66) from the recovery water tank (6).
- Detach the drain hose (50) from the support.
- Lift and remove the recovery water tank (6) to access the battery compartment.
- Unhook the cleanser pipe (68) to facilitate the removal of the battery.
- Untighten the two lug nuts (69) and the positive and negative battery terminals, and disconnect the (70) and (71) power cables.
- Using its handle, lift and replace the battery (72).
- Replace all the components in reverse order.



WARNING:

Be careful to reconnect the cleanser pipe (68) correctly.

13.1 - PARAMETER SETTING (Fig. A)

13.1.a - OPERATOR parameters

It is possible for the operator to have access to the menu to set the following parameters:

- **Language**
- **Type of batteries**
- **Display - Contrast**
- **Display - Luminosity**

To enter the menu act as follows:

- Press and hold the buttons (27) , (25)  simultaneously and then the button (23)  to display the following screen (22):



- Release the buttons pressed.
- Enter the 4-digit Password "0010" by pressing the button (23)  to switch between the digits and the buttons (27)  or (25)  to change the number of the flashing digit.
- Press the button (23)  to confirm and go to the next digit, to finally confirm the password and have access to the parameters list.
- Press the button (27)  or (25)  to scroll through the parameters and then the button (23)  to access the chosen parameter.


Language setting:



Language selection: Selezione lingua

- Choose the language using the buttons (27)  or (25) , then press the button (23)  to confirm the choice;
- **ITA** = Italian
- **ENG** = English

Setting the type of battery:

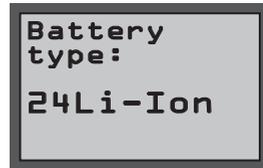

Battery type: Selezione tipo di batteria



NOTE:

This parameter is fixed and cannot be edited.

Display setting - Contrast:



Display tune Contrasto display

- Choose the type of contrast of the display by setting a value from "0 to 10" using the buttons (27)  or (25) , then press the button (23)  to confirm the choice.

Display setting - Brightness:




Display brghtnss | Luminosità display

- Choose the type of brightness of the display by setting a value from “0 to 10” using the buttons (27)  or (25) , then press the button (23)  to confirm the choice.

Exit - Operator parameters:

- Navigate to the main menu with the button (26)  to the following screen:

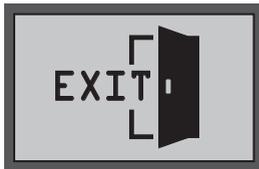

- Press the button (23)  to exit the operator parameter setting and restart the machine.

14.1 - FUSE CHECK/ REPLACEMENT



NOTE:

All machine electrical circuits are protected by auto-resettable electronic devices. The safety fuse and relay activates only in case of serious damage.

It is recommended to have the fuses replaced by qualified personnel only.

15.1 - ALARMS DURING THE FUNCTIONING

When a machine malfunction takes place, the display (22 Fig A) indicates the type of alarm according to the list shown below.

Consult the list and put in place the solution recommended to restore the correct functioning of the machine.

Should the recommended remedy fail to solve the problem, get in contact with the Technical Assistance Service.

ALARM	MEANING	SOLUTION
AL_1	Memory error	Restart the machine.
AL_2	Key malfunction	Turn off the machine for at least 10 seconds, then restart.
AL_3	Low voltage	Turn off the machine, check the status of the battery charge, fuses, contacts, cabling and connections, then restart the machine.
AL_4	Excessive voltage	Turn off the machine, check the fuses, contacts, cabling and connections, then restart the machine.
AL_6	Absence of communication with the command dashboard or display	Turn off the machine, check the contacts, cabling and connections, then restart the machine.
AL_41	Overheating	Turn off and wait for the machine to cool down. Check the consumption of the brush and suction device motors, the status of the ambient ventilation and restart.
AL_42	Power damaged	Turn off the machine for at least 10 seconds, then restart.
AL_44	Relay fault	If persists replace the main board.
AL_45	Relay fault dc	If persists replace the main board.
AL_46	Over-current Brushes	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet, than restart. The 3 alarms can appear on the display simultaneously, but it signals an over-current on a single motor that cannot be determined with certainty.
AL_47	Over-current Suction device	
AL_48	Over-current Water pump	
AL_49	Current measurement Brush	Check the consumption and the kind of application of the brush function, then restart the machine.
AL_52	Current measurement Suction	Check the consumption and the suction device function, then restart the machine.

16.1 - TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The machine does not start when pressing the  button.	Low battery (for BC version only).	Check that the battery is charged.
	Plug disconnected (for E version only).	Connect the plug.
The machine does not work correctly and the display (22) shows the error code: "AL_XX"	Alarm condition of the electronic control system of the machine.	See paragraph "Alarms during functioning".
The brush doesn't turn.	Levers on the handle bar not pressed.	Press the levers.
	Gearmotor fault.	Replace gearmotor. (*)
	Faulty electronic board.	Replace the electronic board. (*)
The suction unit does not function.	Recovery tank full.	Empty the tank.
	Defective turbine motor.	Replace the turbine motor. (*)
	Faulty electronic board.	Replace the electronic board. (*)
The machine does dry properly, leaving traces of water on the floor.	Aspirator off.	Start up the aspirator.
	Aspiration tube blocked.	Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.
	Recovery tank full.	Empty the recovery tank.
	Squeegee rubber blades worn.	Replace or turn over the squeegee rubber blades.
During the brush release operation, the brush does not release from the deck.	The squeegee assembly was not raised.	Lift the squeegee assembly and press the brush release button again.
	The machine is too much tilted.	Do not lift the brush deck excessively and press the brush release button again.

PROBLEM	CAUSE	SOLUTION
No cleaning solution comes out.	Empty tank.	Fill the tank.
	Closed tap valve.	Open the tap valve.
	Filter clogged.	Clean the filter.
	Pump solenoid valve not functioning.	Replace the solenoid valve pump. (*)
	Defective water pump.	Replace the water pump. (*)
	Faulty electronic board.	Replace the electronic board. (*)
Insufficient floor cleaning.	Unsuitable brushes or detergent.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned.
	Brush worn.	Replace the brush.

(*) Call customer service to request replacement.

17.1 - DEMOLITION OF THE MACHINE



DANGER:

Lithium battery and electrical parts are to be considered as special waste and must therefore be disposed of at appropriate collection facilities, as prescribed by the current regulations in the country of use.

18.1 - WIRING DIAGRAM

Key:


AL	Power supply (E)
BAT	Battery (BC)
BC	Battery charger (BC)
EB1	Electronic functions card
EB2	Display
EB3	Control panel
F1	Brush fuse (30A)
F2	Water pump fuse (10A)
F3	Vacuum fuse (10A)
FB	Battery fuse (40A)
FS	Functions card fuse (10A)
MA	Vacuum motor
MS	Brush motor
PA	Water pump
SW1	Lever microswitch
SW2	Float switch

SW3	Magnetic door switch
LED	Filling warning LED


Colour codes:

BK	Black
BU	Blue
BN	Brown
GN	Green
GY	Grey
OG	Orange
PK	Pink
RD	Red
VT	Violet
WT	White
YE	Yellow


18.1.a - Wiring diagram (E version)

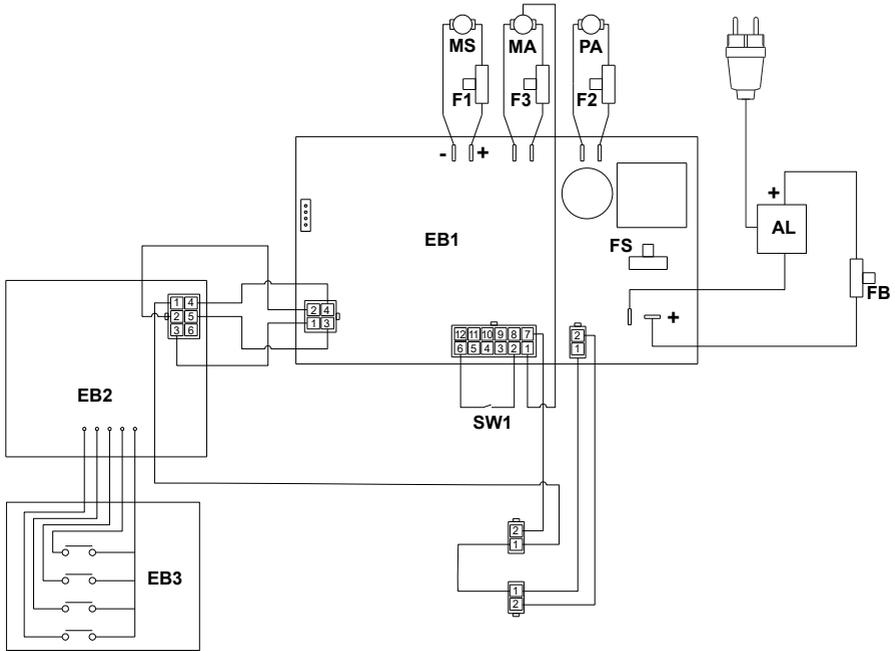

18.1.b - Wiring diagram (BC version)

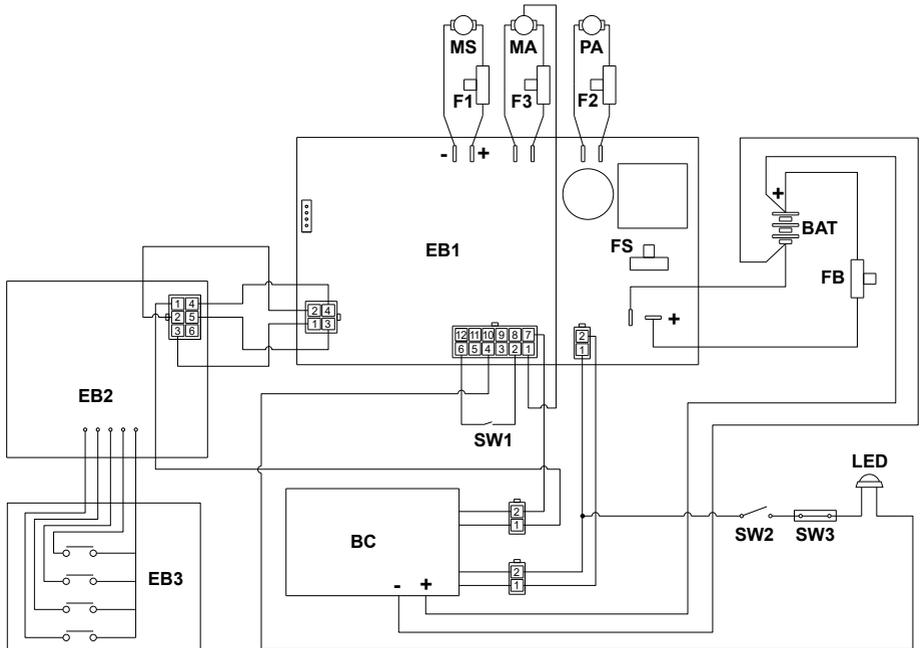

DEALER

 

Riello Cleaning Machines S.p.A.

Registered Office

Via Enrico Fermi, 43 - 37136 Verona (VR) - Italy

Headquarters

Via Circonvallazione, 5 - 27020 Dorno (PV) - Italy

P. +39 0382 848811 - F. +39 0382 84668 - M. info@riellocm.com



ghibli.com - wirbel.it

