


PROBLEM	CAUSE	SOLUTION
Pressing the switch (45) “  ”, the machine does not work.	<p>Low battery.</p> <p>Main fuse blown.</p> <p>The battery’s plug is still located in the charger’s outlet.</p>	<p>Check that the battery is charged.</p> <p>Replace the main 50A or 75A fuse.</p> <p>Place the plug correctly.</p>
The brush does not rotate.	<p>Function card damaged.</p> <p>The touch sensor on the handle is defective.</p> <p>Brush motor damaged.</p> <p>Brush switch not pressed or failure.</p>	<p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Press the appropriate switch or replace it.</p>
Aspirator does not work.	<p>Function card damaged.</p> <p>Intake motor damaged.</p> <p>Vacuum switch not pressed or failure.</p> <p>Recovery tank full.</p>	<p>Replace.</p> <p>Replace.</p> <p>Press the appropriate switch or replace it.</p> <p>Empty, wash and clean the tank.</p>
The machine does not dry well, leaving traces of water on the floor.	<p>Aspirator off.</p> <p>Aspiration tube blocked.</p> <p>Dirty wiper.</p> <p>Recovery tank full.</p> <p>Dirty water filter clogged.</p> <p>Squeegee rubber blades worn.</p>	<p>Start up the aspirator.</p> <p>Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.</p> <p>Clean the wiper.</p> <p>Empty the recovery tank.</p> <p>Clean the filter.</p> <p>Replace or turn over the squeegee rubber blades.</p>

PROBLEM	CAUSE	SOLUTION
No water comes out.	Tank empty. Solenoid valve enabling switch not pressed. Tap turned off. Filter blocked. Solenoid valve does not work.	Fill the tank. Press the switch. Open the tap Clean the filter. Call the technical support service.
Insufficient floor cleaning.	Unsuitable brushes or detergent. Brush worn.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned. Replace the brush.