

PROBLEM	CAUSE	SOLUTION
The machine will not start if you turn the key selector to ON .	<p>Low battery.</p> <p>Damaged key block.</p> <p>Main fuse blown.</p> <p>Damaged battery plug.</p>	<p>Check that the battery is charged.</p> <p>Replace.</p> <p>Replace the main 30A or 75A fuse.</p> <p>Replace.</p>
The brush does not rotate.	<p>Function card damaged.</p> <p>Brush motor damaged.</p> <p>Brush button damaged or not pressed.</p>	<p>Replace.</p> <p>Replace.</p> <p>Push the button or replace it.</p>
Aspirator does not work.	<p>Function card damaged.</p> <p>Intake motor damaged.</p> <p>Suction unit button damaged or not pressed.</p> <p>Recovery tank full.</p> <p>Blocked suction filter.</p>	<p>Replace.</p> <p>Replace.</p> <p>Push the button or replace it.</p> <p>Empty, wash and clean the tank and the probes.</p> <p>Clean the filter.</p>
The machine does not dry well, leaving traces of water on the floor.	<p>Suction motor defective.</p> <p>Aspiration tube blocked.</p> <p>Dirty wiper.</p> <p>Recovery tank full.</p> <p>Dirty water filter clogged.</p> <p>Squeegee rubber blades worn.</p>	<p>Replace the motor.</p> <p>Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.</p> <p>Clean the wiper.</p> <p>Empty the recovery tank.</p> <p>Clean the filter.</p> <p>Replace or turn over the squeegee rubber blades.</p>

PROBLEM	CAUSE	SOLUTION
No water comes out.	Tank empty. Tap turned off. Filter blocked. Solenoid valve does not work.	Fill the tank. Open the tap Clean the filter. Call the technical support service.
Insufficient floor cleaning.	Unsuitable brushes or detergent. Brush worn.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned. Replace the brush.
The brush does not rotate. Aspirator does not work. No water comes out.	Defective sensor.	Replace.