PROBLEM	CAUSE	SOLUTION
The machine does not start up when the key is turned.	Low battery.	Check that the battery is charged.
	Main fuse blown.	Replace the fuse found on the battery cable.
	Defective key.	Change the key.
The brush doesn't turn.	Movement set to neutral.	Engage forward or reverse movement.
	Engine trouble.	Replace engine.
	Faulty board.	Change the board.
The suction unit does not function.	Recovery tank full.	Empty the tank.
	Defective turbine motor.	Change the motor.
	Faulty board.	Change the board.
The machine does dry prop- erly, leaving traces of water on the floor.	Aspirator off.	Start up the aspirator.
	Aspiration tube blocked.	Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.
	Recovery tank full.	Empty the recovery tank.
	Squeegee rubber blades worn.	Replace or turn over the squeegee rubber blades.
No water comes out.	Tank empty.	Fill the tank.
	Defective water pump.	Change the water pump.
	Faulty board.	Change the board.
	Filter clogged.	Clean the filter.
	Pump solenoid valve not functioning.	Call technical assistance.

PROBLEM	CAUSE	SOLUTION
The machine does not move in working conditions.	Operator not properly seated in the driver's seat.	Sit properly in the driver's seat.
	Defective monowheel.	Monowheel replacement.
	Movement direction not en- gaged.	Use the appropriate control to engage the desired move- ment direction.
	Faulty board.	Change the board.
	Operator presence sensor malfunction.	Call customer service to re- quest replacement.
Insufficient floor cleaning.	Unsuitable brushes or deter- gent.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned.
	Brush worn.	Replace the brush.
The empty solution tank indi-	Empty tank.	Fill the tank.
cator " $-\overset{1}{\overset{1}{\overset{1}{\overset{1}{\overset{1}{\overset{1}{\overset{1}{\overset{1}$	Tap closed.	Open the tap.
	Faulty flowmeter.	Replace the flowmeter.