



PROBLEM	CAUSE	SOLUTION
The machine does not start up when the key is turned.	Low battery.	Check that the battery is charged.
	Main fuse blown.	Replace the fuse found on the battery cable. (*)
	Defective key.	Change the key. (*)
The brush doesn't turn.	Reduction motor fault.	Replace reduction motor. (*)
	Faulty electronic board.	Replace the electronic board.
During the brush attachment procedure, the icon “  ” appears on the display.	Detection of incorrect brush centring by the control unit.	Reposition the brush and repeat the procedure.
The suction unit does not function.	Recovery tank full.	Empty the tank.
	Defective vacuum motor.	Replace the vacuum motor. (*)
	Faulty Electronic board.	Replace the electronic board. (*)
The machine does dry properly, leaving traces of water on the floor.	Aspirator off.	Start up the aspirator.
	Aspiration tube blocked.	Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.
	Recovery tank full.	Empty the recovery tank.
	Squeegee rubber blades worn.	Replace or turn over the squeegee rubber blades.
No water comes out.	Empty tank.	Fill the tank.
	Filter clogged.	Clean the filter.
	Pump solenoid valve not functioning.	Replace the solenoid valve pump. (*)
	Defective water pump.	Replace the water pump. (*)
	Faulty Electronic board.	Replace the electronic board. (*)

PROBLEM	CAUSE	SOLUTION
The machine does not move in working conditions.	Operator not properly seated in the driver's seat.	Sit properly in the driver's seat.
	Defective wheel motor.	Replace the wheel motor. (*)
	Faulty Electronic board.	Replace the electronic board. (*)
	Operator presence sensor malfunction.	Replace the operator presence sensor. (*)
Insufficient floor cleaning.	Inadequate brush pressure on the floor.	Activate the extra pressure function.
	Unsuitable brush or detergent.	Use brush or detergents which are suitable for the type of floor or dirt to be cleaned.
	Brush worn.	Replace the brush.
The empty solution tank icon “  ” keeps flashing.	Empty tank.	Fill the tank.
	Tap closed.	Open the tap.
	Faulty flowmeter.	Replace the flowmeter. (*)

(\*) Call customer service for replacement.