

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch not pressed. Plug not inserted. No current.	Press the switch. Insert the plug into the socket. Check the power supply line.
Suction is not satisfactory.	Paper bag full. Filter elements clogged. Accessories or tubes clogged. Suction nozzle squeegee worn or damaged.	Replace the dust bag. Clean the filter elements. Check and clean the flexible hose and the suction nozzle. Check and replace the squeegee.