

PROBLEM	CAUSE	REMEDY
Vacuum cleaner does not work.	Switch is not pressed. Plug is not inserted. Power cut.	Press the switch. Insert the plug into the socket. Check the power line.
Unsatisfactory suction.	Paper bag is full. Filter components are clogged. Clogged accessories or pipes.	Replace the dust bag. Clean the filter components. Check and clean the flexible pipe and the suction outlet.