

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch not pressed.	Press the Motor switch to "ON" and ensure the Tool switch is set to "MAN".
	Plug not inserted.	Insert the plug into the socket.
	No current.	Check the power supply line.
Suction is not satisfactory.	Fleece bag full.	Replace the dust bag.
	Container full.	Empty container.
	Filter elements clogged.	Clean the filter components. Clean or replace the class M cartridge filter.
	Accessories or tubes clogged.	Check and clean the flexible hose and the suction nozzle.
	Suction nozzle squeegee worn or damaged.	Check and replace the squeegee.