

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch not pressed.	Press the switch.
	Plug not inserted.	Insert the plug into the socket.
	No current.	Check the power supply line.
Suction is not satisfactory.	Mesh filter full or clogged.	Empty or clean the mesh filter.
	Accessories or tubes clogged.	Check and clean the flexible hose and the suction nozzle.
	Rubber strips of the liquid suction nozzle worn or damaged.	Check and replace the liquid suction nozzle.
Does not discharge.	Evacuation pump off.	Check that the plug for the evacuation pump is inserted in the power socket on the cover head.