

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not work.	Switch is not pressed.	Press the switch.
	Device is not plugged in.	Insert the plug into the socket.
	Lack of electricity.	Check power line.
The intake is not satisfactory.	Paper bag is full.	Replace dust collection bag.
	Filter elements are blocked.	Clean the filter elements.
	Accessories or hoses blocked.	Check and clean the hose and nozzle.