

RUSH / WSD

R 65 RD 55





EN Use and Maintenance



49.0333.00
ed. 02/2026



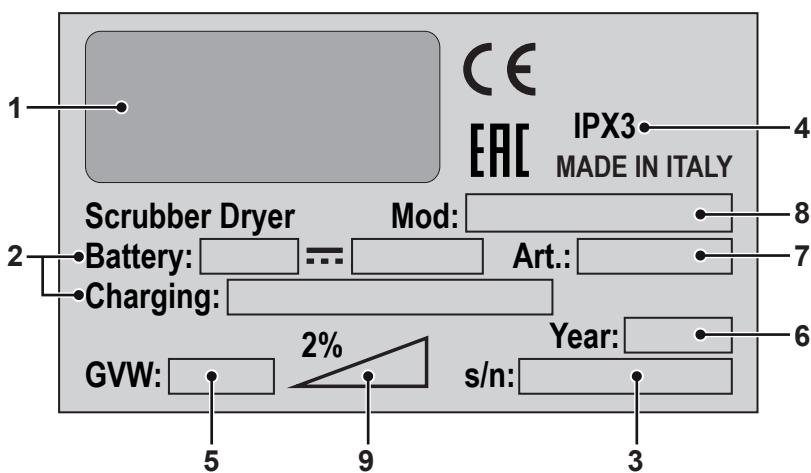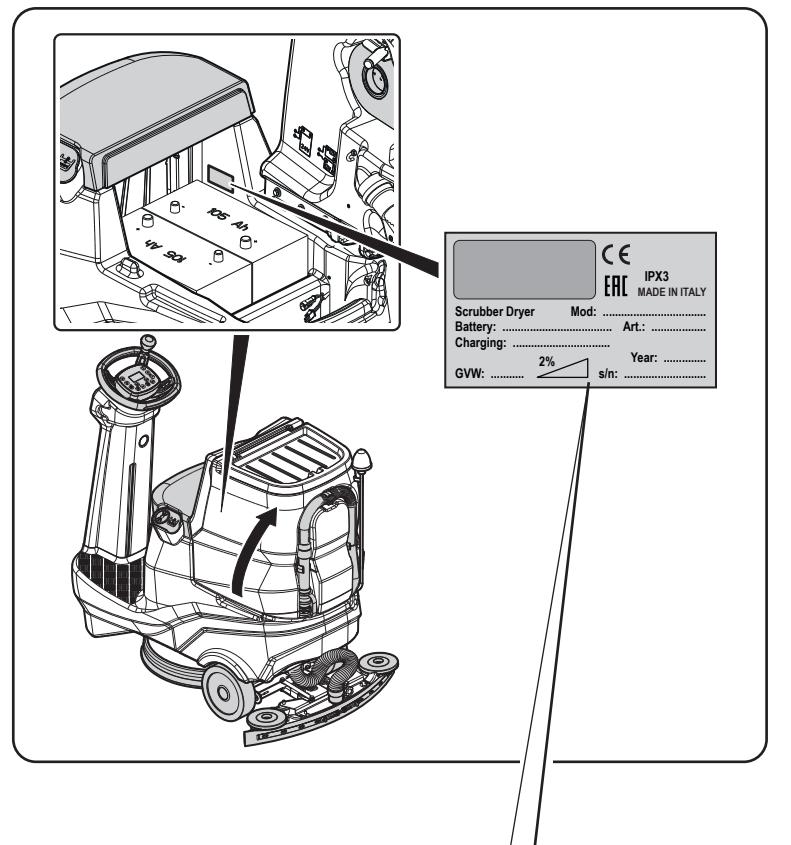

	1	2	3
IT	Produttore	Caratteristiche elettriche	N° Matricola
EN	Manufacturer	Electrical characteristics	Serial N°
FR	Producteur	Caractéristiques électriques	N° Matricule
DE	Hersteller	Elektrische Eigenschaften	Serien-Nr.
ES	Fabricante	Características eléctricas	N° Matrícula
PT	Produtor	Características elétricas	Número de série
NL	Producent	Elektrische eigenschappen	Seriennummer
CS	Výrobce	Elektrické údaje	Výrobní č.
RU	Изготовитель	Электрические характеристики	Заводской №
PL	Producent	Specyfikacja elektryczna	Numer seryjny
AR	الصانع	المواصفات الكهربائية	الرقم التسلسلي

	4	5	6
IT	Grado di protezione	Peso in ordine di marcia	Anno di costruzione
EN	Degree of protection	Weight in running order	Year of manufacture
FR	Degré de protection	Poids en ordre de marche	Année de construction
DE	Schutzgrad	Gewicht bei Betrieb	Baujahr
ES	Grado de protección	Peso en orden de marcha	Año de fabricación
PT	Grau de protecção	Peso em ordem de marcha	Ano de construção
NL	Beschermingsgraad	Gewicht in rijklare toestand	Bouwjaar
CS	Úroveň ochrany	Hmotnost v provozním stavu	Rok výroby
RU	Баθμός προστασίας	Βάρος στην λειτουργία	Έτος κατασκευής
PL	Stopień zabezpieczenia	Ciążar podczas eksploatacji	Rok produkcji
AR	درجة الحماية	الوزن في وضعيّة التشغيل	سنة الصنع

	7	8	9
IT	Codice articolo	Modello	Massima pendenza superabile
EN	Item code	Model	Maximum superable slope
FR	Référence de l'article	Modèle	Pente maximum surmontable
DE	Artikelnummer	Modell	Maximal befahrbare Steigung
ES	Código del artículo	Modelo	Máxima pendiente que se puede superar
PT	Código do artigo	Modelo	Máximo declive transponível
NL	Artikelcode	Model	Maximaal berijdbare hellingsgraad
CS	Kód položky	Model	Maximální překonatelný sklon
RU	Код изделия	Модель	Максимальный преодолимый наклон
PL	Kod artykułu	Model	Maksymalne superable stoku
AR	رمز المنتج	الطراز	أقصى درجة ميلان قابلة للخطي

EN

English..... ENGLISH - 1
(*Translation of original instructions*)

Dear Customer,

Thank you for choosing one of our cleaning products.

The floor scrubber dryer that you have purchased has been designed to satisfy the user in terms of ease of use and reliability over time.

We are aware that in order for a good product to stay that way, over time, it requires continuous updates aimed at meeting the expectations of those who use it on a daily basis. For this reason, we hope that you will not only be a satisfied customer but also a partner who does not hesitate to give us your opinions and ideas originating from your personal day-to-day experience.

INDEX

INDEX	2
TECHNICAL DATA	3
1.1 - INTRODUCTION	4
1.1.a - Operator position	4
1.1.b - General warnings while using the machine	4
1.2 - UNINTENDED USE OF THE MACHINE	5
2.1 - GETTING TO KNOW THE MACHINE (Fig. A)	5
3.1 - UNPACKING (Fig. B)	5
3.1.a - Battery check and installation (Fig. A)	5
3.1.b - Unloading the machine from the wooden pallet (Fig. B)	5
4.1 - ASSEMBLY COMPONENTS	6
4.1.a - Squeegee installation (Fig. C)	6
4.1.b - Brush installation (Fig. M)	6
5.1 - CHARGING THE BATTERY	6
5.1.a - Charging the battery with an external battery charger (Fig. G)	7
5.1.b - Battery charging with on-board battery charger (Fig. G)	7
6.1 - MACHINE CONTROLS	7
6.1.a - Control panel (Fig. F)	7
6.1.b - Accelerator pedal (Fig. A)	10
7.1 - DISPLAY (Fig. F)	10
8.1 - EMERGENCY	12
9.1 - SAFETY DEVICES (Fig. A)	12
10.1 - FILLING THE TANK (Fig. D)	12
10.2 - DETERGENT CHEMICAL TANK (if present) (Fig. E)	12
11.1 - OPERATION (Fig. A-F)	13
11.1.a - Checks before use	13
11.1.b - Preparing the machine and choosing the cycle	13
11.1.c - Using the machine	13
11.1.d - End of use and shutdown	14
12.1 - DRAINING THE RECOVERY WATER (Fig. H)	14
13.1 - MAINTENANCE AND CLEANING	15
13.2 - OPERATIONS TO PERFORM DAILY	15
13.2.a - Emptying and cleaning the clean water tank (Fig. I)	15
13.2.b - Cleaning the recovery water tank (Fig. J)	15
13.2.c - Squeegee cleaning (Fig. K)	15
13.3 - OPERATIONS TO BE CARRIED OUT EVERY WEEK	16
13.3.a - Cleaning the water filter (Fig. P)	16
13.4 - OPERATIONS TO PERFORM WHEN NECESSARY	16
13.4.a - Brush replacement (Fig. M)	16
13.4.b - Replacing the squeegee rubber blades (Fig. K)	16
13.4.c - Squeegee incidence adjustment (Fig. N)	17
13.4.d - Checking the wear status of the three wheels (Fig. A)	17
14.1 - PARAMETER SETTING (Fig. F)	18
14.1.a - OPERATOR parameters	18
15.1 - FUSE CHECK/REPLACEMENT	20
16.1 - ALARMS DURING THE FUNCTIONING (Fig. F)	20
17.1 - TROUBLESHOOTING	23
18.1 - DEMOLITION OF THE MACHINE	24
19.1 - WIRING DIAGRAM	25

TECHNICAL DATA

	RUSH R 65 RD 55 WSD R 65 RD 55
Driving type	Ride-on
Features	
Operation and Supply	Battery 24 V
Type of batteries	N° 2 - 12V 105Ah (C5)
Battery charger	13 A
Installed power	1153 W
Running time	3 h 20min (105Ah C5)
Advancement	Forward / reverse (rear) drive
Washing track width	530 mm
Suction width	750 mm
Productivity theoretical	3200 m ² /h
Productivity practical	1920 m ² /h
Hand-arm vibration system (ISO 5349-1)	< 2,5 m/s ²
Whole body vibration (ISO 2631-1)	< 0,5 m/s ²
Sound pressure (ISO 11203) (LpA)	64 dB(A)
Sound pressure in silent mode (LpA)	59 dB(A)
IP code	IPX3
Brush	
Diameter / pad / number	530 mm / 21" / 1
Motor power / number	500 W / 1
Brush speed	165 giri/min.
Specific pressure	13 gr/cm ²
Specific pressure (extra pressure)	21 gr/cm ²
Traction	
Maximum slope of use during work	2 %
Maximum slope when empty (*)	12 %
Drive motor power	220 W
Maximum forward speed	6 km/h
Suction	
Motor power	385 W
Depression (water column)	107 mbar / 1070 mmH ₂ O
Air flow	45 l/sec

Tank

Typology	Double tank
Solution capacity	65 l
Recovery capacity	68 l

Dimensions

Machine dimensions (l x w x h)	1280 x 580 x 1185 mm
Machine width - Brush deck head	715 mm
Machine width - squeegee	750 mm
Battery compartment dimensions (l x w x h)	360 x 350 x 325 mm
U turning diameter (in transfer)	1140 mm
U turning diameter (in working condition)	1480 mm

Weight

Empty weight	115 kg
Weight with Gel 12V 105Ah batteries	185 kg
Gross vehicle weight (GVW)	328 kg

(*) The machine was tested under the following conditions:

- Standard battery
- Empty tanks
- Raw concrete ramp
- Ramp length 15 m
- 75 kg of operator

1.1 - INTRODUCTION



NOTE:

The numbers and the figure references shown in brackets refer to the components indicated in the annexed illustrative sheet.



DANGER:

Before using the machine carefully read the “SAFETY WARNINGS FOR FLOORS WASHER-DRYER” manual annexed to this one and the additions indicated below.

1.1.a - Operator position

The operator, during the machine use is sitting on the seat with his hands on the steering wheel.

1.1.b - General warnings while using the machine

- DO NOT leave the machine unattended on inclined surfaces.
- It is absolutely forbidden to turn while on ramps; danger of tipping/overturning.
- Avoid using the machine in environments where there is a risk of falling objects.

1.2 - UNINTENDED USE OF THE MACHINE

- Do not operate the machine with the recovery tank open.
- Hands and feet must be kept on board while the machine is in motion.
- Do not make sudden turns, especially during downhill movements.



WARNING:

Only ONE PERSON at a time is to be permitted on board the machine.

2.1 - GETTING TO KNOW THE MACHINE (Fig. A)

- (1) Steering wheel with control panel
- (2) Ignition key
- (3) Seat
- (4) Operator presence sensor
- (5) EMERGENCY push-button, to stop immediately all functions
- (6) Foot rest
- (7) Accelerator pedal
- (8) Rear and drive wheels
- (9) Work light (optional)
- (10) Flashing light (optional)
- (11) Recovery water tank
- (12) Recovery water tank cover
- (13) Clean water tank
- (14) Plug
- (15) Recovery water drain hose
- (16) Squeegee water aspiration hose
- (17) Squeegee bumper rollers
- (18) Clean water tank level tube
- (19) Brush deck head
- (20) Squeegee
- (21) Vacuum motor
- (22) Water filter
- (23) Directional wheel
- (24) Squeegee support hook
- (25) Recovery tank support peg

3.1 - UNPACKING (Fig. B)

Once the packaging has been removed as indicated in the instruction sheet on the packaging itself, check the integrity of the machine and all the components supplied.

If any obvious damage is found, contact your local dealer and carrier within 3 days of receipt.

- Remove the envelope and boxes (26) containing the supplied accessories:
 - (20) Squeegee.
 - (32) Machine use and maintenance manual.
 - (33) Battery charger instruction manual
 - (34) N° 1 brush.

3.1.a - Battery check and installation (Fig. A)

- Lift the recovery tank carefully (11).
- The machine configuration is with 2 x 12V batteries.
- Place and connect the batteries as shown in the figure, using the cables and plugs provided.
- Lower the recovery water tank carefully (11).



NOTE:

The batteries must be installed and connected by qualified personnel.

3.1.b - Unloading the machine from the wooden pallet (Fig. B)

- Remove the wooden block (27) positioned in front of the front wheel.
- Place the ramp (28) in front of the wooden pallet as indicated in the instruction sheet on the packaging.
- Sit on the seat (3) in driving position.
- Turn the key (2) on “ON”.
- Press the travel direction button (31) “”, with the “” icon on the display, then

”, with the “” icon on the display, then press the accelerator pedal (7) and step off the pallet (29) carefully.

4.1 - ASSEMBLY COMPONENTS

4.1.a - Squeegee installation (Fig. C)

- Insert the squeegee (20) into its support plate (35) and secure it with the levers (36) by rotating them clockwise.
- Connect the suction tube (16) to the squeegee's intake opening (37).

4.1.b - Brush installation (Fig. M)

- Turn the key (2) to "ON".
- On the right side of the machine, rotate the splash guard (74) upwards without removing it from its hooks.
- Place the brush (34) under the brush deck (19).
- Press the button (45)  (short press).
- The machine begins the attachment procedure, the display (41 Fig. F) shows the "" icon flashing.



NOTE:

On the display (41 Fig. F), the flashing "" icon persists for a few seconds longer than the actual ascent of the brush deck.

When the "" icon is switched off, the functions are active again and the machine can be used.



WARNING:

If the brush did not engage on the first attempt, check the centring of the brush.

The "" icon is displayed if incorrect centring is detected by the control unit during the brush attachment procedure.

Reposition the brush and repeat the procedure.

5.1 - CHARGING THE BATTERY



DANGER:

Charge the batteries in well-ventilated rooms that comply with the regulations in force in the country of use. For information relating to safety, follow what is described in chapter 1 of this manual.



WARNING:

For information and warnings about the battery and on board battery charger (if present) follow what is described in the battery charger manual enclosed with this document.

When the machine leaves the factory, it is calibrated to operate with gel bat-

teries. If other types of batteries are installed, see the paragraph “Parameter setting”.

The use of gel batteries with calibration for acid or other batteries is prohibited.

(Only for without on-board battery charger versions) The appliance must only be supplied at SELV (safety extra-low voltage) external battery chargers.



NOTE:

(For GEL batteries only) 10 hours are needed for complete battery charging. Avoid partial recharges.

Charge the batteries at the end of each job or at least when the battery symbol “

- Drive the machine to the battery charging station.
- Lift the recovery water tank (11) making sure it is empty.

5.1.a - Charging the battery with an external battery charger (Fig. G)

- Check the function of the battery charger consulting the corresponding Manual.
- The nominal voltage of the battery charger must be equal to 24 V.
- Take connector (39) from the appropriate housing (38) and connect it to the external battery charger.
- Connect the battery charger to the electrical network.
- When the recharging is finished, disconnect the battery charger from the network and from connector (39).
- Lower the recovery water tank carefully (11).

5.1.b - Battery charging with on-board battery charger (Fig. G)

- From the appropriate housing (38), take and connect the plug of the battery charger cable (40) to the electrical network (the network voltage and frequency must be the same as the corresponding values of the battery charger, shown in the machine's registration plate).



NOTE:

When the battery charger is connected to the electrical mains, all machine functions are automatically disabled.

- On the display (41 Fig. F), when the segments light up in sequence on the battery symbol , this means that the battery charger is charging the batteries.
- When all the segments in the battery symbol are lighted up steadily, the battery charging cycle has ended.
- Disconnect the battery charger cable (40) from the electrical network and insert it into the appropriate housing (38).
- Lower the recovery water tank carefully (11).

6.1 - MACHINE CONTROLS

6.1.a - Control panel (Fig. F)

(2) Ignition key

- Turned in a clockwise direction to “ON” it powers the circuits, enabling machine operation.
- Turned in an anti-clockwise direction to “OFF” it disconnects power to the circuits and can be removed.

(30) Buttons for maximum speed adjustment

It is possible to adjust the maximum travel speed using buttons (30a) “

ENGLISH

- Pressing the accelerator pedal (7) completely, the speed will be adjusted proportionally to the maximum set value.
- When all speed symbols “” are lighted on the display (41), the accelerator pedal (7) is inhibited and the machine remains stopped.

(31) Travel direction button

- By pressing the button (31) “”, with the “” icon on the display, the machine proceeds in forward gear.
- By pressing the button in (31) “”, with the “” icon on the display, the machine proceeds in reverse and the reverse buzzer is activated.



NOTE:

The maximum backward speed can be set, as in the forward travel, with buttons (30).

(41) Display

- See the specific chapter.

(42) “Ready to go” button

- By pressing the button (42) on the display, the icon “” shows up and the following functions are started according to a standard setting:
 - Lowering of the brush deck head and rotation of the brush.
 - Lowering of the squeegee and starting of the suction device.
 - Work speed = 3rd notch (3,6 km/h).
 - Water flow = 3rd notch.
 - Chemical agent = 3rd notch (1%).
 - Suction = normal (100%).
 - Brush pressure = normal.
- With this standard function activated it is possible to press any work button for any modification or adjustment.

If necessary, when a modification is set in the work functions, it is possible to save it acting as indicated below:

- Press and keep pressed the button (42) for 3 seconds; the saving confirmation is indicated on the display (41) by the flashing of “**UPLOADED**”.
- To deactivate the new setting and return to the standard setting values, press again and keep pressed the button (42) for 3 seconds; the confirmation is indicated on the display (41) by the flashing of “**RESET**”.

(43) ECO button

- When pressing the button (43) on the display in the work phase, the icon “” shows up, the parameters of water, chemical agent, suction and brush pressure assume the following values:
 - Water flow = 3rd notch.
 - Chemical agent = 3rd notch (1%).
 - Suction = silent (50%).
 - Brush pressure on the floor = normal.

(44) Suction / Silent operation button

- By pressing the button (44) the suction device turns on and the icon “” shows up on the display and, if the forward gear is engaged or if the machine is in neutral, the squeegee lowers.
- With the suction function turned on, the next time you press the button (44) the speed of the suction turbine is reduced, significantly reducing the noise emitted by the machine; with the function enabled the “” icon appears on the display.
- The next time the button (44) is pressed, the vacuum cleaner stops, the squeegee raises and the vacuum system icons on the display go off.



NOTE:

With the machine stopped, the squeegee lowered and the key (2) in the “ON” position, after a period of inactivity the squeegee will automatically raise.



(45) Brush attachment / release button

- By briefly pressing the button (45), the brush attachment procedure is activated. On the display (41), the flashing icon “” indicates activation of the procedure.
- Pressing the button (45) for 3 seconds activates the brush release procedure. On the display (41), the flashing icon “” indicates activation of the procedure.



(46) Brush / extra pressure mode button

- By pressing the button (46), the brush deck head lowers and the icon “” shows up on the display.
- The brush start rotating when the accelerator pedal is pressed, they stop when the accelerator pedal is raised.



NOTE:

The brush rotate both in forward and reverse mode and with speed adjustment (30) at “0”.



NOTE:

With the machine stopped, the deck head lowered and the brush stopped with the key (2) in the “ON” position, after a period of inactivity the brush deck head will automatically raise.

- With the brush on the ground and working, the next time you press the button (46) the extra pressure is activated; with the function enabled the “” icon appears on the display.



NOTE:

The extra pressure function is equipped with a safety system that automatically recognises an excessive current absorption of the brush motor and it’s able to automatically change the lowered brush pressure taking it to the most useful position.

- The next time the button (46) is pressed, the brush stop, the brush deck head raises and the brush system icon on the display go off.



NOTE:

Each time the brush deck head lifts (rest position), the brush pressure sets at the minimum value.



(48) Chemical agent dosing button (if present)

- Pressing the button (48) the icon “” shows up on the display, and the dosing of the chemical agent is prepared. The dosing pump operation is commanded by the accelerator pedal pressed.
- Pressing the button (48) repeatedly, the quantity of chemical agent increases; up to the maximum quantity viewed on the display of icon “”. By pressing the button (48) the function is deactivated and the icon turns off on the display.



NOTE:

In case of emptying of the chemical agent dosing system, after replacing the tank, hold and hold the button (48) pressed for at least 5 seconds to activate the air purge procedure lasting about 40 seconds; this function is activated only with the machine stopped, the key (2) in the “ON” position and with the speed adjustment (30) at “0”.

(49) Water flow button

- Pressing the button (49), the icon “” shows up on the display and the opening of the water solenoid valve is prepared. The operation of the same is commanded by the accelerator pedal pressed.
- Repeatedly press the button (49) to increase the water quantity; when the maximum quantity is reached, it'll be shown on the display by the icon “”. If the button (49) is pressed again the function will be disabled.

(50) Acoustic warning button

(51) Rotating flashing light button

(52) Operating light button

6.1.b - Accelerator pedal (Fig. A)

- Pressing the accelerator pedal (7), the machine moves either forward or backward, according to the travel direction button that was pressed.
- The speed can be adjusted by a higher or lower pressure on the accelerator pedal.
- Release the accelerator pedal (7) to slow down the machine until it stops. After a few seconds after the machine is still the parking brake automatically activates; this brake will be disabled when the accelerator pedal (7) is pressed with forward or reverse motion on.

7.1 - DISPLAY (Fig. F)

With the machine running, the following icons show up on the display (41):



Indicates the charge status of the batteries:



Maximum advance speed

With buttons (30a) “” and (30b) “” the maximum speed attainable by the machine is set with the accelerator pedal (7) completely pressed:

					
km/h - 0	1,2	2,4	3,6	4,8	6,0



Travel direction

The travel direction arrow indicates the selected advance function by acting on the button (31) “”.



“Ready to go”

It is viewed on the display when the button (42) “” is pressed.



Is shown when the ECO function is active through the button (43) “”.



Suction device working

Is viewed on the display when the button (44)



is pressed, indicating that the suction device is on and the squeegee is lowered.



Silent operation

With the suction device on.

The next time the button (44)

Brush rotation

Is viewed on the display when the button (46)



is pressed, indicating that the brush rotation is enabled.



Extra-pressure

With brush rotation enabled.

The subsequent pressing of the button (46)



enables the brush extra pressure, it is indicated with the



Detergent dispenser (if present)

Is viewed on the display when the button (48)



is pressed.

Press the button to increase or reduce the percentage of detergent being dosed:

0,2%	0,5%	1%	2%	3%



Brush attachment

Flashing appears on the display after briefly

pressing the button (45)



Brushes release

Flashing appears on the display after pressing the button (45)



Preparation of the water flow

Is viewed on the display when the button (49)

is pressed, indicating that the water flow solenoid valve is enabled. When the water level in the tank is at a minimum, the icon

is viewed in full screen combined with the acoustic signal.

Replenish the water tank (13) as indicated in the specific paragraph, then turn off and restart the machine



Absence of the operator on the driver's seat

This icon warns when the operator is not correctly seated on the driver's seat and blocks all the machine functions.



Maximum liquid level in recovery tank

This displays when the fluid in the recovery tank has reached the maximum level.



Accelerator pedal pressed

This icon inserts when the machine starts indicating a wrong starting operation sequence, to remove the alarm release the accelerator pedal (7 Fig. A).



Brush attachment procedure warning

This icon is displayed if incorrect centring is detected by the control unit during the brush attachment procedure..

8.1 - EMERGENCY

The emergency button (5 Fig. A) is located in an easily accessible position for the operator. It must be firmly pressed in case of an immediate need to stop the machine in all its functions.

To reactivate the machine functionality, pull the emergency button until it disengages and resets.



WARNING:

Only press the emergency button (5) with the machine running in case of a real need, do not use this procedure to stop the machine, this may cause also serious faults in the same.

9.1 - SAFETY DEVICES (Fig. A)

The machine is equipped with the following safety functions:

Operator presence sensor (4)

It blocks all the machine functions when the operator is not present in the driving seat.

Anti-skid safety system

This system reduces the speed when turning and when the machine tilts laterally to avoid sudden skids, this increasing the machine stability in any condition.

Electromagnetic brake

It is built-in the rear driving wheels (8) and keeps the machine braked when the machine is off or stopped.

10.1 - FILLING THE TANK (Fig. D)



WARNING:

Only add clean mains water to the tank at a temperature no greater than 50°C.

- Using the extractable pipe (47) fill water into the tank (13) until it is replenished.
- Do not fill the tank completely, use the level tube (18) as a reference.
- Or, if available, open cap (14) and use the waterstop intake (53, if present).



WARNING:

Always visually check the fill level to avoid the risk of floor wetting.

- At the end of the tank replenishment close the cap (14).



NOTE:

For machines without the chemical kit, fill the tank (13) with clean water and mix it with the chemical detergent.

Always follow the dilution instructions indicated in the label of the chemical product packaging, to prepare the detergent solution.

10.2 - DETERGENT CHEMICAL TANK (if present) (Fig. E)



NOTE:

Use non-foamy detergents only. For the quantities, follow the instructions provided by the detergent manufacturer according to the type of dirt.

- Raise the recovery tank (11).
- Check that in the tank (54) there's the product necessary for the working day.

In case of tank replacement work as indicated below:

- Remove the cap (55), extract the tank (54) and insert a new 5 litres one then insert the cap (55) using the small suction pipe.



DANGER:

In case of contact of the detergent with the eyes and skin, or in case of ingestion, please refer to the safety and application bulletin of the detergent manufacturer.



NOTE:

The tanks (54) to use are the standard 5 litres type which can be found on the market.

- Lower the recovery water tank carefully (11).
- Carry out the air purge (see the procedure on item "Chemical agent dosing button").

11.1 - OPERATION (Fig. A-F)

11.1.a - Checks before use

- Check that the recovery tank's drainage tube (15) is properly connected and sealed.
- Check that the squeegee's water suctioning tube (16) is properly inserted into the recovery tank.
- Check that the coupling (37) on the squeegee (20) is not obstructed and that the tube (16) is properly connected.
- Check the charge status of the batteries by turning the key (2) to its "ON" position and checking the charge indication on the display (41).

11.1.b - Preparing the machine and choosing the cycle

- Sit on the driving position.
- The machine can perform 4 working cycles:

Washing, brushing, drying cycle:

- Press the button "Ready to go" (42)  to prepare the detergent flow, the brush rotation and the start of the suction device.

Drying only cycle:

- To perform only the drying cycle press the button (44) , the aspirator activates.

Brushing only cycle:

- To perform only the brushing cycle press the button (46) , the brush rotation is prepared.
- Brush rotation starts when the machine, with the accelerator (7) pressed, starts moving forward or backward, or with the accelerator pressed and setting the forward speed to "0".

Washing, brushing cycle:

- Press the button (46)  to prepare brush rotation and press the button (49)  to prepare water supply.
- The brush rotation and the water flow start when the accelerator pedal is pressed with the forward or backward gear, or with the setting of the advance speed at least on the 1st notch.

11.1.c - Using the machine



DANGER:

Be extremely careful when using the machine on ramps in order to avoid roll over or situations which may cause the machine to lose its balance.



DANGER:

Avoid sudden sharp turns. Turn the wheel from lock to lock only at low speed, always considering ground conditions.

- Turn the key (2) to "ON"; in the first 2 second after turning on, the display (41) indicates the type of batteries installed and the machine work time.
- Select the type of work cycle to be followed.
- Insert the desired work speed acting on buttons (30).
- Activate the flashing light (10, optional) and the work light (9, optional).
- Use the accelerator (7) to begin the cleaning operations.



NOTE:

Release the accelerator to stop the rotation of the brush and the dispensing of water.



NOTE:

Proper floor cleaning and drying is performed by driving the machine forwards. When driving in reverse, the squeegee is raised and the suction unit, for removing the water from the floor, is deactivated.

- Adjust the washing solution quantity with the button (49) "  " if its necessary.
- Check the charge status of the batteries on the display (41).

11.1.d - End of use and shutdown

- Once all of the cleaning operations have been completed, shut off, in sequence, the rotation of the brush and the suction unit, using the relative controls according to the type of cycle being employed.

- Turn the key (2) to its "OFF" position.
- The parking brake automatically activates.
- Empty and wash out the recovery tank and the solution tank as indicated in the relative sections.



NOTE:

When the operator gets out of the machine the parking brake automatically activates.



DANGER:

It is forbidden to park the machine on ramps.

12.1 - DRAINING THE RECOVERY WATER (Fig. H)



NOTE:

Before lifting the recovery water tank (11) make sure it is empty.

At the end of the washing cycle or when the recovery water tank (11) is full, it is necessary to empty the tank by proceeding as follows:



NOTE:

To dispose of the recovery water, comply with the standards in force in the country in which the machine is used..

- Position the machine near to a drain outlet.
- Detach the pipe (15) from its proper hook, descending it to the floor over the discharge drain.
- Unscrew the cap (56) and discharge completely the recovery water contained in the tank.



NOTE:

The amount of water that comes out can be modulated by pressing on the end of the tube (15).

- Tighten the cap (56) and replace the pipe (15) on its corresponding support.

13.1 - MAINTENANCE AND CLEANING



WARNING:

For information and warnings related to maintenance and cleaning operations please follow what is indicated in the "SAFETY WARNINGS FOR FLOORS WASHER-DRYER" annexed to this one.

13.2 - OPERATIONS TO PERFORM DAILY

13.2.a - Emptying and cleaning the clean water tank (Fig. I)



WARNING:

At the end of the washing operations, it is compulsory to drain and clean the clean water tank (13) to prevent deposits or scaling.

After draining the recovery water tank, drain the clean water tank (13) as follows:

- Position the machine over a drain outlet.
- On the right-hand side, beneath the machine, detach the hose (17) from the couplings, lower it to the floor into the drain, open the tap (57) and allow the water to drain completely.
- Wash the inside of the tank leaving the tap (57) open and introduce clean water from the upper opening.

- At the end of cleaning, close the tap (57) and reattach the hose (17) using the grooves provided.

13.2.b - Cleaning the recovery water tank (Fig. J)



WARNING:

At the end of the washing operations, it is compulsory to clean the recovery water tank to prevent deposits or scaling and the proliferation of bacteria, odours or mould.

- Lift the cover (12).
- Remove the dirt collection basket (58) and open its cover, then clean with running water, also removing eventual pieces of paper, wood, etc... that are clogging it.
- Remove and clean the suction filter (59) with running water.
- Leaving the discharge pipe (15 Fig. H) low and the cover removed, fill with water through the upper opening (60), then flush inside the tank until clean water flows out of the discharge pipe.
- Reassemble all parts working in the reverse order.

13.2.c - Squeegee cleaning (Fig. K)

In order to clean the squeegee correctly (20), it is necessary to remove it as follows:

- Release the levers (36 Fig. C) by rotating them anti-clockwise and remove the squeegee (20).
- Wash the squeegee and in particular the rubber blades (60) and the inside of the aspiration connector (56).



NOTE:

If, during washing, it is clear that the rubber blades (60) and (61) are damaged or worn, it is necessary to replace them or turn them over.

- Replace all the components in reverse order.

13.3 - OPERATIONS TO BE CARRIED OUT EVERY WEEK

13.3.a - Cleaning the water filter (Fig. P)

- On the left side, beneath the machine, close the cleaning solution tap (71).
- Unscrew the transparent filter cover (72) and remove the filter (73).
- Clean the filter (73) with running water; if it is clogged replace it.
- Reassemble all parts working in the reverse order.
- Open the cleaning solution tap (71).

13.4 - OPERATIONS TO PERFORM WHEN NECESSARY

13.4.a - Brush replacement (Fig. M)



NOTE:

Before carrying out the brush release procedure, if any splash guard bristles (optional) are present, at least one on one side must be removed.

The brush must be replaced whenever they appear worn or whenever their bristles are shorter than 2 cm. They must also be replaced based on the type of flooring to be cleaned; in order to replace them, perform the following operations:

- Turn the key (2 Fig. F) to the "ON" position.

- With the brush deck (19) raised, press the button (45) "RELEASE" for 3 seconds to activate the release procedure, when activated on the display (41 Fig. F) the "RELEASE" icon appears flashing, then wait for the brush to fall on the floor.
- At the end of the brush release procedure, the "RELEASE" icon disappears.
- On the right side of the machine, rotate the splash guard (74) upwards without removing it from its hooks.
- Remove and replace the brush.
- For the brush attachment procedure, follow the instructions in the section "Brush installation".

13.4.b - Replacing the squeegee rubber blades (Fig. K)

When it becomes clear that drying the floor is difficult or traces of water remain on the floor, it is necessary to check the wear on the squeegee rubber blades (20):

- Remove the squeegee unit (20) as indicated in the "Cleaning the squeegee" paragraph.
- With the tabs (65), release and remove the elastic bands (66) from the retainers (63), then remove the outer rubber (60).
- With the tabs (68), release and remove the elastic bands (69) from the retainers (64), then remove the outer rubber (61).



NOTE:

When the rubber blades (60) or (61) are worn on one side, on one occasion they may be turned over.

- Replace or turn over the rubber blades (60) or (61) without inverting them.
- Replace all the components in reverse order.



NOTE:

*Two types of rubber are available:
Para rubber for all types of flooring and poly-
urethane rubber for workshop floors with oily
residues.*

13.4.c - Squeegee incidence adjustment (Fig. N)

- Start the machine and press the button  (44 Fig. F) “”.
- Adjust the speed to maximum on the 1[^] notch with the buttons (30 Fig. F), press the accelerator pedal (7 Fig. A) and step away a few metres, then turn the machine off and on again.
- Use the threaded bar (70) to adjust the squeegee blades (60) and (61) contact with the floor. Turn it clockwise for increased contact and counter clockwise for less contact.



NOTE:

When the squeegee is making proper contact with the floor, there will be no streaking on the floor during machine function and the entire length of the squeegee will be in contact with the floor.

13.4.d - Checking the wear status of the three wheels (Fig. A)

- Check the wear status of the three wheels (8) and (23) periodically; if they appear worn or damaged, contact a technical service centre in order to have them replaced.



DANGER:

Operating the machine with worn or damaged wheels poses a danger to the operator as the machine could have less traction when turning.

14.1 - PARAMETER SETTING (Fig. F)

14.1.a - OPERATOR parameters

It is possible for the operator to have access to the menu to set the following parameters:

- **Language**
- **Type of batteries**
- **Display - Contrast**
- **Display - Luminosity**


To have access to the menu act as follows:

- Press and hold buttons (49) “

General Sets	General Sets
ID Check	Check
Insert password	Insert password

- Release the buttons pressed.
- Insert the 4-digit Password “0010” pressing the buttons (30a) “

General Main	Principal configurations
Language selection	Language selection

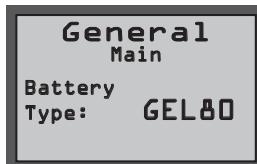

General Main	Principal configurations
Battery Type	Battery type selection



General Main	Principal configurations
Display Tune	Display contrast



General Main	Principal configurations
Display Brightness	Display brightness


Language setting:



General Main	Principal configurations
Language selection	Language selection

- Select the language acting on buttons (30a) “+” or (30b) “-”, then press the button (43) “**ECO**” to confirm the selection;
- **ITA** = Italian
- **ENG** = English

Setting the type of battery:

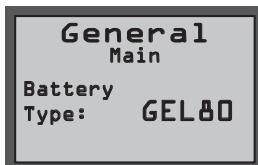

General Main	Principal configurations
Battery Type	Battery type selection

- Select the type of battery acting on buttons (30a) “+” or (30b) “-”, then press the button (43) “**ECO**” to confirm the selection;
- **Pb80** = Lead battery
- **Gel80** = Gel battery
- **Li-Ion** = Lithium battery
- **Custom** = Optional battery

Display setting - Contrast:



General Main	Principal configurations
Display Tune	Display contrast

- Select the type of display contrast setting a value from “0 to 50” acting on buttons (30a) “+” or (30b) “-”, then press the button (43) “**ECO**” to confirm the selection.

Display setting - Brightness:



General Main	Principal configurations
Display Brightness	Display brightness

- Select the type of display brightness by setting a value from “0 to 10” acting on the buttons (30a) “+” or (30b) “-”, then press the button (43) “**ECO**” to confirm the selection.



NOTE:

When the selected setting is confirmed, the machine restarts and the display (41) lights up in the work operation mode.

15.1 - FUSE CHECK/REPLACEMENT



NOTE:

All machine electrical circuits are protected by auto-resettable electronic devices. The safety fuses activates only in case of serious damage.

It is recommended to have the fuses replaced by qualified personnel only.

16.1 - ALARMS DURING THE FUNCTIONING (Fig. F)

When a machine malfunction takes place, the display (41) indicates the type of alarm according to the list shown below.

Consult the list and put in place the solution recommended to restore the correct functioning of the machine.

Should the recommended remedy fail to solve the problem, get in contact with the Technical Assistance Service.

ALARM	MEANING	SOLUTION
AL_1: General	Memory error	Restart the machine.
AL_2: General	Key malfunction	Turn off the machine for at least 10 seconds, then restart.
AL_3: General	Low voltage	Turn off the machine, check the status of the battery charge, fuses, contacts, cabling and connections, then restart the machine.
AL_4: General	Excessive voltage	Turn off the machine, check the fuses, contacts, cabling and connections, then restart the machine.
AL_6: General	Absence of communication with the command dashboard or display	Turn off the machine, check the contacts, cabling and connections, then restart the machine.
AL_41: Function	Overheating	Turn off and wait for the machine to cool down. Check the consumption of the brush and suction device motors, the status of the ambient ventilation and restart.
AL_42: Function	Power damaged	Turn off the machine for at least 10 seconds, then restart.
AL_44: Function	Relay fault	The Relay/Remote switch does not close. Check the remote switch operation. In case of relay on board, if persists replace the board.

ALARM	MEANING	SOLUTION
AL_46: Function	Over-current Brush	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet, then restart.
AL_47: Function	Over-current Suction device	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet, then restart.
AL_48: Function	Over-current Water pump	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet, then restart.
AL_49: Function	Current measurement Brush	Check the consumption and the kind of application of the brush function, then restart the machine.
AL_52: Function	Current measurement Suction device	Check the consumption and the suction device function, then restart the machine.
AL_54: Function	Function Connections Brush	Check the brush motor connection.
AL_57: Function	Connections Suction device	Check the suction device motor connection.
AL_61: Function	Current measurement Brush actuator	Check the consumption of the actuator motor and the status of the mechanical moving parts.
AL_62: Function	Over-current Brush actuator	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet.
AL_63: Function	Limit switch Brush actuator	Check the limit switch connections / status. Active control only for BTO version.
AL_65: Function	Current measurement Squeegee actuator	Check the consumption of the actuator motor and the status of the mechanical moving parts.
AL_66: Function	Over-current Squeegee actuator	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet.
AL_80: Traction	Overheating Traction motor	Turn off and wait for the machine to cool down. Check the consumption and the kind of application of the traction, the status of the ambient ventilation, then restart.

ALARM	MEANING	SOLUTION
AL_85: Traction	Over-current Traction motor	Turn off the machine, check the load (motor), the mechanics, the cabling and the connections, then look for the presence of a short circuit on the outlet, then restart.
AL_86: Traction	Current measurement Traction motor	Check the consumption and the kind of application of the traction function, then restart the machine.
AL_87: Traction	Reading of Traction Motor	Restart the machine.
AL_88: Traction	Electric brake fault	Turn off the machine, check the brake cabling, then restart.
AL_89: Traction	Fault Accelerator Pedal	Turn off the machine, check the connections and cabling, then restart.
AL_90: Traction	Accelerator Pedal Pressed	Release the pedal and restart the machine.

17.1 - TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The machine does not start up when the key is turned.	Low battery.	Check that the battery is charged.
	Main fuse blown.	Replace the fuse found on the battery cable. (*)
	Defective key.	Change the key. (*)
The brush doesn't turn.	Reduction motor fault.	Replace reduction motor. (*)
	Faulty electronic board.	Replace the electronic board.
During the brush attachment procedure, the icon  appears on the display.	Detection of incorrect brush centring by the control unit.	Reposition the brush and repeat the procedure.
The suction unit does not function.	Recovery tank full.	Empty the tank.
	Defective vacuum motor.	Replace the vacuum motor. (*)
	Faulty Electronic board.	Replace the electronic board. (*)
The machine does not dry properly, leaving traces of water on the floor.	Aspirator off.	Start up the aspirator.
	Aspiration tube blocked.	Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.
	Recovery tank full.	Empty the recovery tank.
	Squeegee rubber blades worn.	Replace or turn over the squeegee rubber blades.
No water comes out.	Empty tank.	Fill the tank.
	Filter clogged.	Clean the filter.
	Pump solenoid valve not functioning.	Replace the solenoid valve pump. (*)
	Defective water pump.	Replace the water pump. (*)
	Faulty Electronic board.	Replace the electronic board. (*)

PROBLEM	CAUSE	SOLUTION
The machine does not move in working conditions.	Operator not properly seated in the driver's seat.	Sit properly in the driver's seat.
	Defective wheel motor.	Replace the wheel motor. (*)
	Faulty Electronic board.	Replace the electronic board. (*)
	Operator presence sensor malfunction.	Replace the operator presence sensor. (*)
Insufficient floor cleaning.	Inadequate brush pressure on the floor.	Activate the extra pressure function.
	Unsuitable brush or detergent.	Use brush or detergents which are suitable for the type of floor or dirt to be cleaned.
	Brush worn.	Replace the brush.
The empty solution tank icon “  ” keeps flashing.	Empty tank.	Fill the tank.
	Tap closed.	Open the tap.
	Faulty flowmeter.	Replace the flowmeter. (*)

(*) Call customer service to request replacement.

18.1 - DEMOLITION OF THE MACHINE



DANGER:

Batteries and electrical parts are to be considered as special waste and must therefore be disposed of at appropriate collection facilities, as prescribed by the current regulations in the country of use.


19.1 - WIRING DIAGRAM

Legend:


AC	Accelerator
BAT	Batteries
BC	Battery charger
BE	Flashing light (optional)
BRK	Electromagnetic brake
EB1	Functions table
EB2	Display
EB3	Command panel
EV	Solenoid valve
F1	Key fuse (3A)
F2	Main fuse (70A)
F3	Suction motor fuse (20A)
F4	Water pump fuse (5A)
HN	Horn
KEY	Start key
L1	Work light (optional)
MA	Suction motor
MAS	Brush deck head actuator motor
MAT	Squeegee actuator motor
MS	Brush motor
MT	Traction motor
PA	Water pump
PC	Chemicals pump
PE	Emergency button
S1	Recovery water level sensor
SW1	Seat microswitch
SW2	Brush deck microswitch

Colour codes:

BK	Black
BU	Blue
BN	Brown
GN	Green
GY	Grey
OG	Orange
PK	Pink
RD	Red
VT	Violet
WT	White
YE	Yellow

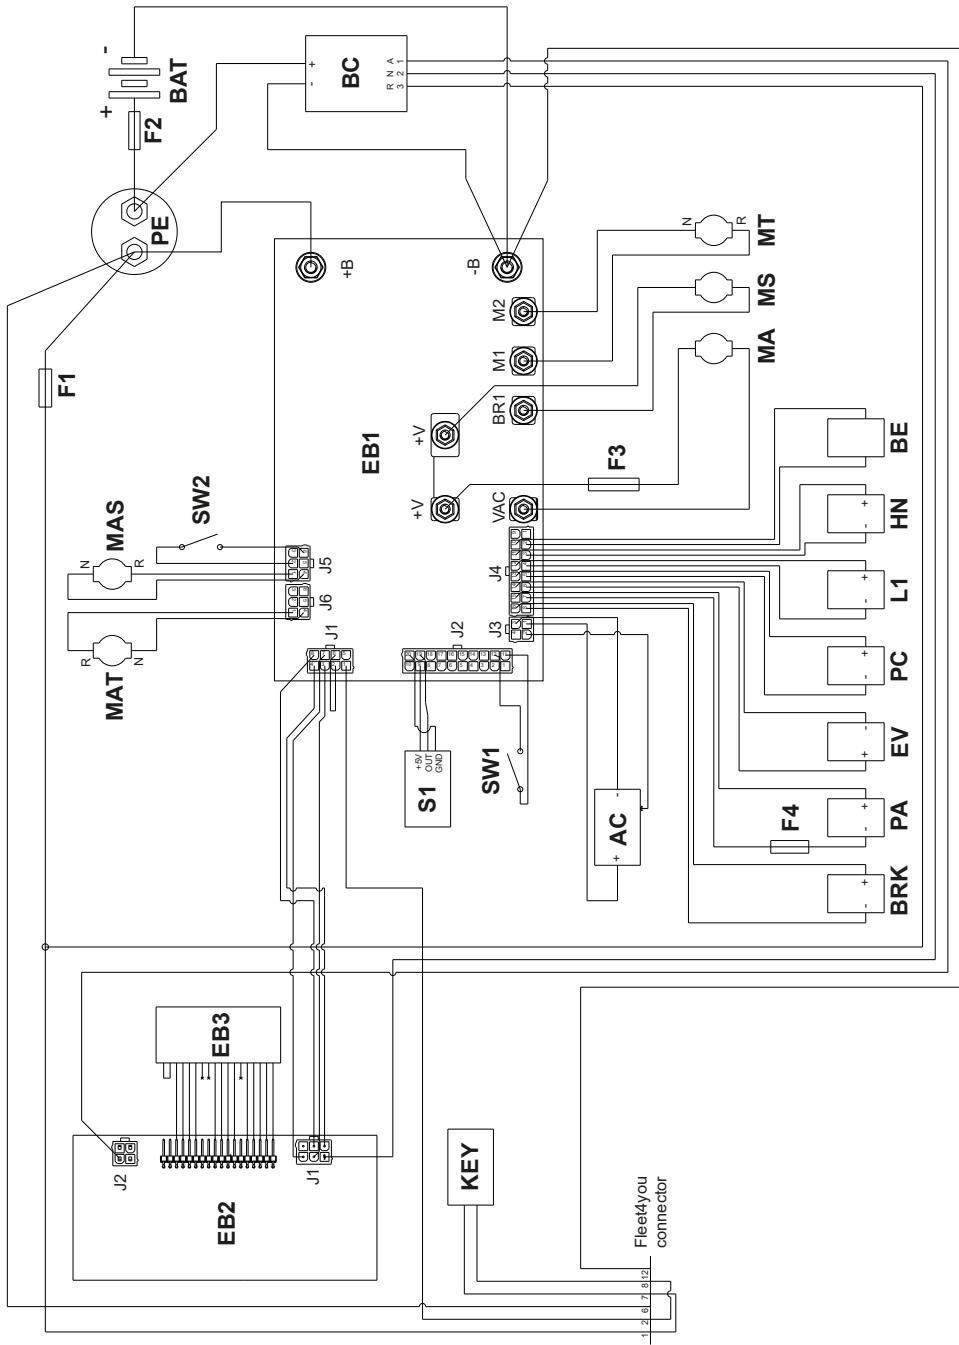

DEALER



Riello Cleaning Machines S.p.A.

Registered Office

Via Enrico Fermi, 43 - 37136 Verona (VR) - Italy

Headquarters

Via Circonvallazione, 5 - 27020 Dorno (PV) - Italy

P. +39 0382 848811 - F. +39 0382 84668 - M. info@riellocm.com



ghibli.com - wirbel.it

